



ET Series

Digital Video Recorder

User's Manual



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and Maintenance (servicing) instructions in the literature accompanying the appliance.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

Important Safeguards

<p>1. Read Instructions All the safety and operating instructions should be read before the appliance is operated.</p> <p>2. Retain Instructions The safety and operating instructions should be retained for future reference.</p> <p>3. Cleaning Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.</p> <p>4. Attachments Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.</p> <p>5. Water and/or Moisture Do not use this equipment near water or in contact with water.</p> <p>6. Accessories Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.</p> <p>7. Power Sources This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.</p> <p>8. Power Cords Operator or installer must remove power and TNT connections before handling the equipment.</p> <p>9. Lightning For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.</p> <p>10. Overloading Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.</p> <p>11. Objects and Liquids Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.</p> <p>12. Servicing Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.</p>	<p>13. Damage requiring Service Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:</p> <p>A. When the power-supply cord or the plug has been damaged. B. If liquid is spilled, or objects have fallen into the equipment. C. If the equipment has been exposed to rain or water. D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation. E. If the equipment has been dropped, or the cabinet damaged. F. When the equipment exhibits a distinct change in performance — this indicates a need for service.</p> <p>14. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.</p> <p>15. Safety Check Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.</p> <p>16. Field Installation This installation should be made by a qualified service person and should conform to all local codes.</p> <p>17. Correct Batteries Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.</p> <p>18. Tmra A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.</p> <p>19. Elevated Operating Ambient Temperature If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).</p> <p>20. Reduced Air Flow Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.</p> <p>21. Mechanical Loading Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.</p> <p>22. Circuit Overloading Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.</p> <p>23. Reliable Earthing (Grounding) Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).</p>
---	---

Table of Contents

Chapter 1 — Introduction	9
1.1 Features	9
1.2 Technical Overview	10
Chapter 2 – Digital Video Recorder Layout.....	11
2.1 Front Panel Layout	11
2.2 Front LED Display	14
2.3 Rear Panel Layout	15
2.4 IR Remote Controller	16
Chapter 3 – Installation.....	17
3.1 Connecting the Video Source.....	17
3.2 Connecting the Loop Through Video.....	17
3.3 Connecting the Monitor	17
3.4 Connecting Audio	18
3.5 Connecting Alarms	18
3.6 Connecting to the RS485.....	19
3.7 Connecting to the Network Port	20
3.8 Connecting to the RS232 Port	20
3.9 Connecting to the USB Port	20
3.10 Connecting to the PTZ Camera Unit	21
Chapter 4 — Quick Guide.....	22
4.1 How to Install	22
4.2 Common User Interface	22
4.3 Monitoring	24
4.4 How to Record	24
4.5 How to Play	24
4.6 How to setup Networking	24
Chapter 5 — Operation	25
5.1 Login to DVR	25
5.2 Logout DVR	25
5.3 Live Monitoring	26
5.4 Live Cameo Menu	27
5.5 Playback Cameo Menu	28
5.6 PTZ Control.....	31
5.7 Recording Video & Audio	35

5.8 Searching Video	36
Quick Search	36
Event Search	37
Overlapped List	37
5.9 Playing Video	38
5.10 Copying Video Clip	42
5.11 Backup Video Data	43
5.12 Checking DVR Status	44
Chapter 6 — Advanced Settings	45
6.1 Camera Setting	46
6.2 Record Setting	49
6.3 Networks Setting	57
6.4 System Setting	60
6.5 System Information	70
Appendix A - Reviewing Backup (Clip) Images	72
Appendix B – How to use the Virtual Keyboard	73
Appendix C – Using Hot Keys	74
Smart Playback	74
Panorama Playback	74
Audio Playback	74
Cut & Save	74
Go to Time Search	74
Appendix D – Troubleshooting	75
Appendix E – Specifications	76
Appendix F – DVR FAQ	77

List of Illustrations

Figure 1 — Typical DVR installation	9
Figure 2 — 16-Channel DVR front panel. (Others are similar.)	11
Figure 3 — Video Input connectors	17
Figure 4 — Video Loop Through connectors	17
Figure 5 — Video Out connectors	17
Figure 6 — Audio In and Out connectors	18
Figure 7 — Alarm Input connector strips	18
Figure 8 — Alarm Output connector strips	19
Figure 9 — RS485 Connector	19
Figure 10 — Network connector	20
Figure 11 — RS232 connector	20
Figure 12 — USB connector	20
Figure 13 — 8-Channel DVR rear panel. (Others are similar.)	21
Figure 14 — ADMIN PASSWORD	25
Figure 15 — LIVE CAMEO MENU	27
Figure 16 — Cameo Menu – Record Change	27
Figure 17 — Cameo Menu – SEQUENCE	27
Figure 18 — PLAYBACK CAMEO MENU	28
Figure 19 — CAMERA CHANGE SLIDE	28
Figure 20 — PTZ Mode View	30
Figure 21 — PTZ MENU	31
Figure 22 — PTZ -PATTERN	32
Figure 23 — SEARCH MENU	35
Figure 24 — QUICK SEARCH 1.....	35
Figure 25 — QUICK SEARCH 2.....	35
Figure 26 — EVENT SEARCH	36
Figure 27 — SEARCH RESULT	36
Figure 28 — OVERLAPPED LIST	36
Figure 29 — Backup	42
Figure 30 — Admin Password	43
Figure 31 — GENERALSETUP	44
Figure 32 — ALARM TYPE-ALARM IN	46
Figure 33 — ALARM TYPE-ALARM OUT.....	46
Figure 34 — HDD SETUP – INSTALL.....	47
Figure 35 — HDD SETUP – OVERWRITE	47
Figure 36 — HDD SETUP –CHECK.....	48
Figure 37 — MONITOR SETUP	59
Figure 38 — PASSWORD SETUP	50

Figure 39 — CONFIG(1)	51
Figure 40 — CONFIG(2)	51
Figure 41 — CAMERA SETUP	53
Figure 42 — ADJUSTMENT SETUP	54
Figure 43 —PTZ SETUP(1)	55
Figure 44 —PTZ SETUP(2)	55
Figure 45 —SPOT SETUP	56
Figure 46 —SEQUENCE	56
Figure 47 — SCHEDULE SETUP	57
Figure 48 — SCHEDULE SETUP – RESOLUTION	57
Figure 49 — TIME RECORD SETUP.....	59
Figure 50 — TIME RECORD SETUP – SPEED AND QUALITY	59
Figure 51 — EVENT RECORD SETUP.....	60
Figure 52 — IEVENT SETUP – INPUT	60
Figure 53 — EVENT SETUP – INPUT - ALARM IN	61
Figure 54 — EVENT SETUP – INPUT - VIDEO LOSS	61
Figure 55 — EVENT SETUP – RECORD	62
Figure 56 — EVENT SETUP-RECORD-DETAIL	62
Figure 57 — EVENT SETUP	63
Figure 58 — EVENT SETUP-ACTION	63
Figure 59 — AUDIO RECORD SETUP.....	64
Figure 60 — ETHERNET SETUP.....	65
Figure 61 — DDNS SETUP	66
Figure 62 — CLIENT SETUP – CLIENT	67
Figure 63 — CLIENT SETUP-USER	67
Figure 64 — CLIENT SETUP-ACCESS	67
Figure 65 — E-MAIL SETUP(1)	68
Figure 66 — E-MAIL SETUP(2)	68
Figure 67 — STATUS	69
Figure 68 — MINI PLAYER	71
Figure 69 — VIRTUAL KEYBOARD	72

Chapter 1 — Introduction

1.1 Features

Your color digital video recorder (DVR) provides recording capabilities for four or eight camera inputs. It provides exceptional picture quality in both live and playback modes, and offers the following features:

- 4 or 8 Composite Input Connectors
- Compatible with Color (NTSC or PAL) and B&W (CCIR and EIA-170) Video Sources
- Multiple Search Engines (Date/Time, Quick, Event)
- Records up to 120 NTSC Frames per Second (100 PAL Frames per Second)
- “Loop-Through” Video Connectors
- Continuous Recording in Disk Overwrite Mode
- Video Archiving via Ultra SCSI Interface
- Continues Recording while Archiving, Transmitting to Remote Site and during Playback
- Various Recording Modes (Manual / Schedule / Event)
- Audio Recording and Playback
- Alarm Connections Include: Input, Output.
- Built-in Alarm Buzzer
- Live or Recorded Video Access via Ethernet or Modem

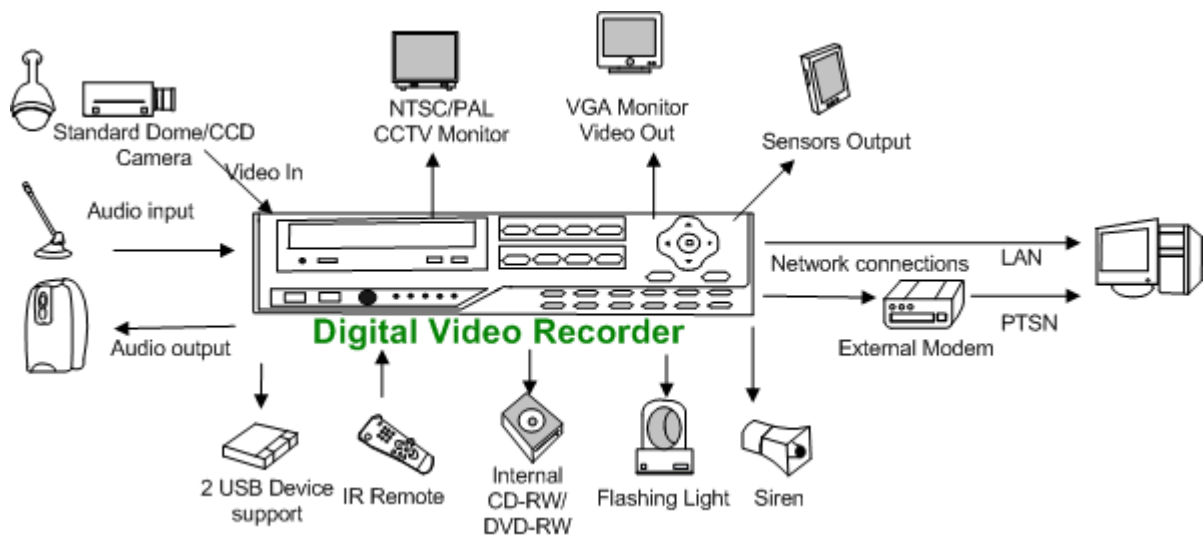


Figure 1 – Typical DVR installation.

1.2 Technical Overview

Your DVR can replace both a time-lapse VCR and a multiplexer in a security installation. However, it has many features that make it much more powerful and easier to use than even the most advanced VCR.

The DVR converts analog NTSC or PAL video to digital images and records them on a hard disk drive. Using a hard disk drive allows you to access recorded video almost instantaneously; there is no need to rewind tape. The technology also allows you to view recorded video while the DVR continues recording video.

Digitally recorded video has several advantages over analog video recorded on tape. There is no need to adjust tracking. You can freeze frames, fast forward, fast reverse, slow forward and slow reverse without image streaking or tearing. Digital video can be indexed by time or events, and you can instantly view video after selecting the time or Event.

Your DVR can be set up for event or time-lapse recording. You can define times to record, and the schedule can change for day, night, weekend and user defined holidays.

The DVR can be set up to alert you when the hard disk drive is full, or it can be set up to record over the oldest video once the disk is full.

Your DVR uses a proprietary encryption scheme making it nearly impossible to alter video.

You can view video and control your DVR remotely by connecting via modem or Ethernet. There is a SCSI port that can be used to record or archive video to external hard disk drives, and also there is a USB port that can be used to back up the clip file video to external hard disk drives or memory sticks.

NOTE: This manual covers the 4-, 8-channel digital video recorders. The DVRs are identical except for the number of cameras and alarms that can be connected and the number of cameras that can be displayed. For simplicity, the illustrations and descriptions in this manual refer to the 8-camera model.

Chapter 2 — Digital Video Recorder Layout

NOTE: Your DVR should be completely installed before proceeding. Refer to Chapter 3 — Installation.

2.1 Front Panel Layout

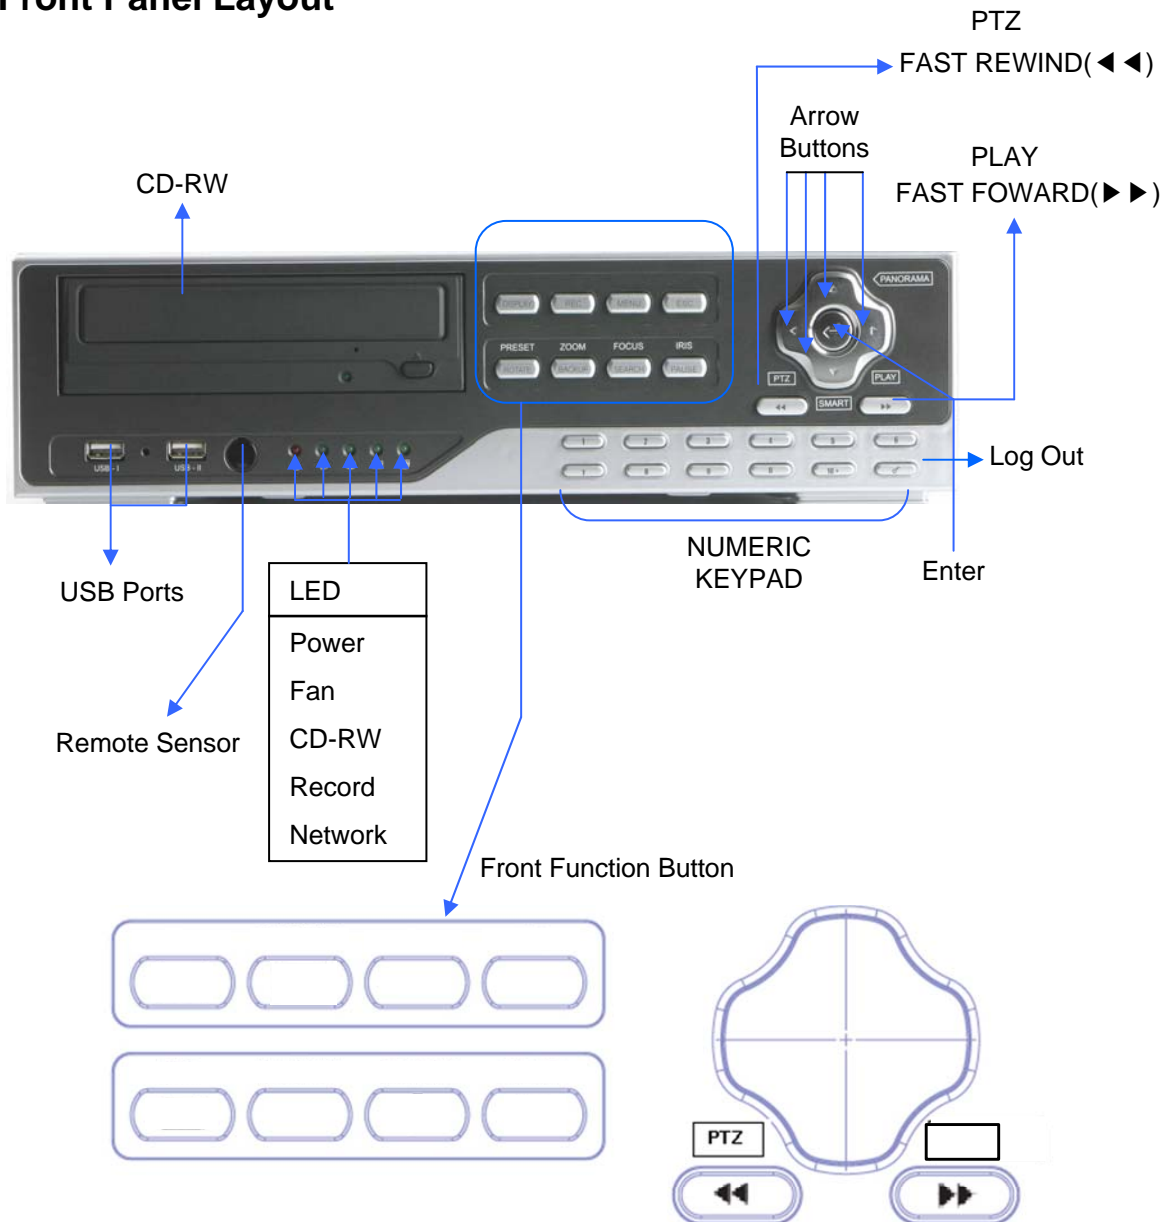


Figure 2 — 8-Channel DVR front panel. (Others are similar.)

The front panel looks and operates much like a VCR combined with a multiplexer. Many of the buttons have multiple functions. The following describes each button and control. Take a few minutes to review the descriptions. You will use these to initially set up your DVR and for daily operations.

UP, DOWN, LEFT, RIGHT Arrow Buttons

These buttons are used to navigate through menus. They are also used to control Pan and Tilt when in the PTZ mode. The arrow buttons can be used to move the position of the active cameo screen, and also move through screen pages. These buttons also have the following functions.

- ▲ Button: Time Jump playback by the time slide bar in the Playback mode. Tilt the camera up in the PTZ mode.
- ▼ Button: Backward playback by the hour and backward frame by frame when pressing this button in the PAUSE mode. Tilt the camera down in the PTZ mode.
- ◀ Button: Backward playback at regular speed in the Playback mode. Pan the camera left in the PTZ mode.
- ▶ Button: Forward playback at regular speed in the playback mode. Pan the camera right in the PTZ mode.

ENTER Button

The (Enter) button selects a highlighted item or completes an entry that you have made.

NUMBER Buttons (0 ~ 9, +10)

Pressing the individual camera buttons will cause the selected camera to display full screen. They are also used to enter passwords. Use the +10 button to select bigger numbers than 10(For example, +10 + 6 = 16).

LOG OUT Button

Pressing the LOG OUT button exits the menu screen and you have to enter the password again to enter to the Setup menu.

DISPLAY Button

Pressing the DISPLAY button toggles between different display formats.

REC Button (●)

When pressing the INSTANT RECORDING button in the live mode, your DVR will start instant recording and you will be asked to confirm the instant recording.

MENU Button

Pressing the MENU button enters the Setup screen. You will need to enter the administrator password to access the Setup. Pressing the button also closes the current menu or setup dialog box.

ESC Button

Pressing the ESC button exits the menu screens or moves to the upper menu.

ROTATE Button / PRESET Button

Pressing the ROTATE button displays another screen whenever you press this button manually. Pressing the PRESET button run preset menu in PTZ mode.

BACKUP Button / ZOOM Button

Pressing the BACKUP button displays the Backup menu. Pressing this button again will exit the Backup menu. This button is also used for the Cut & Save hot key. Refer to the Appendix C. Pressing the ZOOM button run zoom menu in PTZ mode.

SEARCH Button / FOCUS Button

Pressing the SEARCH button displays the Search menu. Pressing the button again will exit the Search menu. This operation is user password protected. Pressing the FOCUS button run focus menu in PTZ mode.

PAUSE Button / IRIS Button

Pressing the PAUSE button while in the live mode will freeze all live cameo. Pressing the PAUSE button while in the playback mode will pause the video. Pressing the IRIS button run iris menu in PTZ mode.

RW (Rewind) Button / PTZ Button

Pressing the RW button plays video backward at high speed. Pressing the button again toggles the playback speed from ◀◀, ◀◀◀, ◀◀◀◀ and ◀◀◀◀◀ and the screen displays ◀◀, ◀◀◀, ◀◀◀◀ and ◀◀◀◀◀ respectively. Used for zooming out in the PTZ mode. Pressing this button in the Pause mode plays video backward at slow speed. Pressing the button again toggles the playback speed from 1/2, 1/4, 1/8 and 1/16.

Pressing this button in live mode opens a Pan/Tilt/Zoom screen which allows you to control properly configured cameras.

FF (Fast Forward) Button / PLAY Button

Pressing the FF button plays video forward at high speed. Pressing the button again toggles the playback speed from ▶▶, ▶▶▶, ▶▶▶▶ and ▶▶▶▶▶ and the screen displays ▶▶, ▶▶▶, ▶▶▶▶ and ▶▶▶▶▶ respectively. Used for zooming in in the PTZ mode. Pressing this button in the Pause mode plays video forward at slow speed. Pressing the button again toggles the playback speed from 1/2, 1/4, 1/8 and 1/16.

Pressing this button in live mode plays last played video. But if it can't play last played video, it runs 'Go To Last'.

2.2 Front LED Display

POWER LED: 


The POWER LED lights when the DVR is turned on.

FAN LED: 


The FAN LED lights when the fan speed is slow down.

CD-RW LED: 

The CD-RW LED lights when the CR-RW is being used.


REC LED: 

The REC LED lights when the DVR is recording.

NET LED: 


The NET LED lights when the DVR is connected to Network.

2.3 Rear Panel Layout

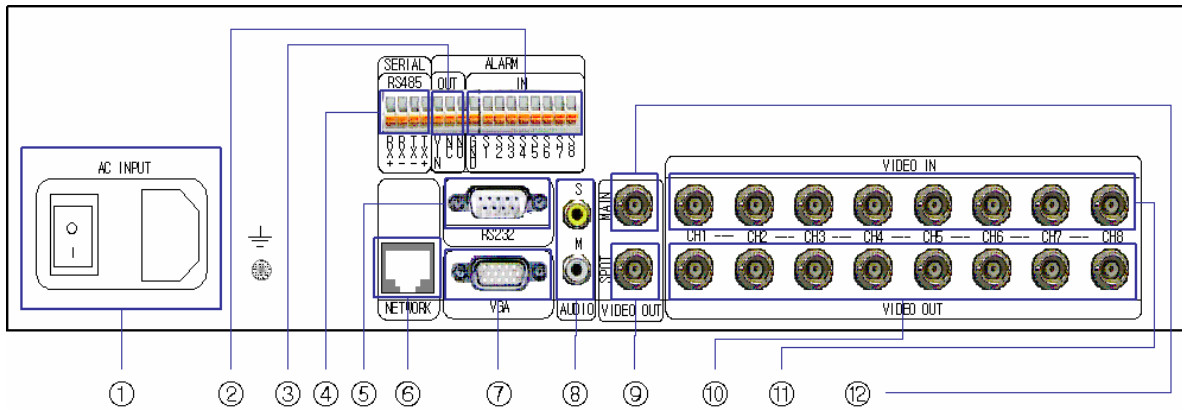

- ① AC POWER INPUT
- ② ALARM IN
- ③ ALARM OUT
- ④ RS485
- ⑤ RS232
- ⑥ RJ45 ETHERNET PORT
- ⑦ VGA MONITOR
- ⑧ AUDIO INPUT/OUTPUT
- ⑨ SPOT OUTPUT
- ⑩ LOOP OUT (1 ~ 8)
- ⑪ CAMERA INPUT (1 ~ 8)
- ⑫ MAIN MONITOR(COMPOSITE VIDEO OUTPUT)

2.4 IR Remote Controller

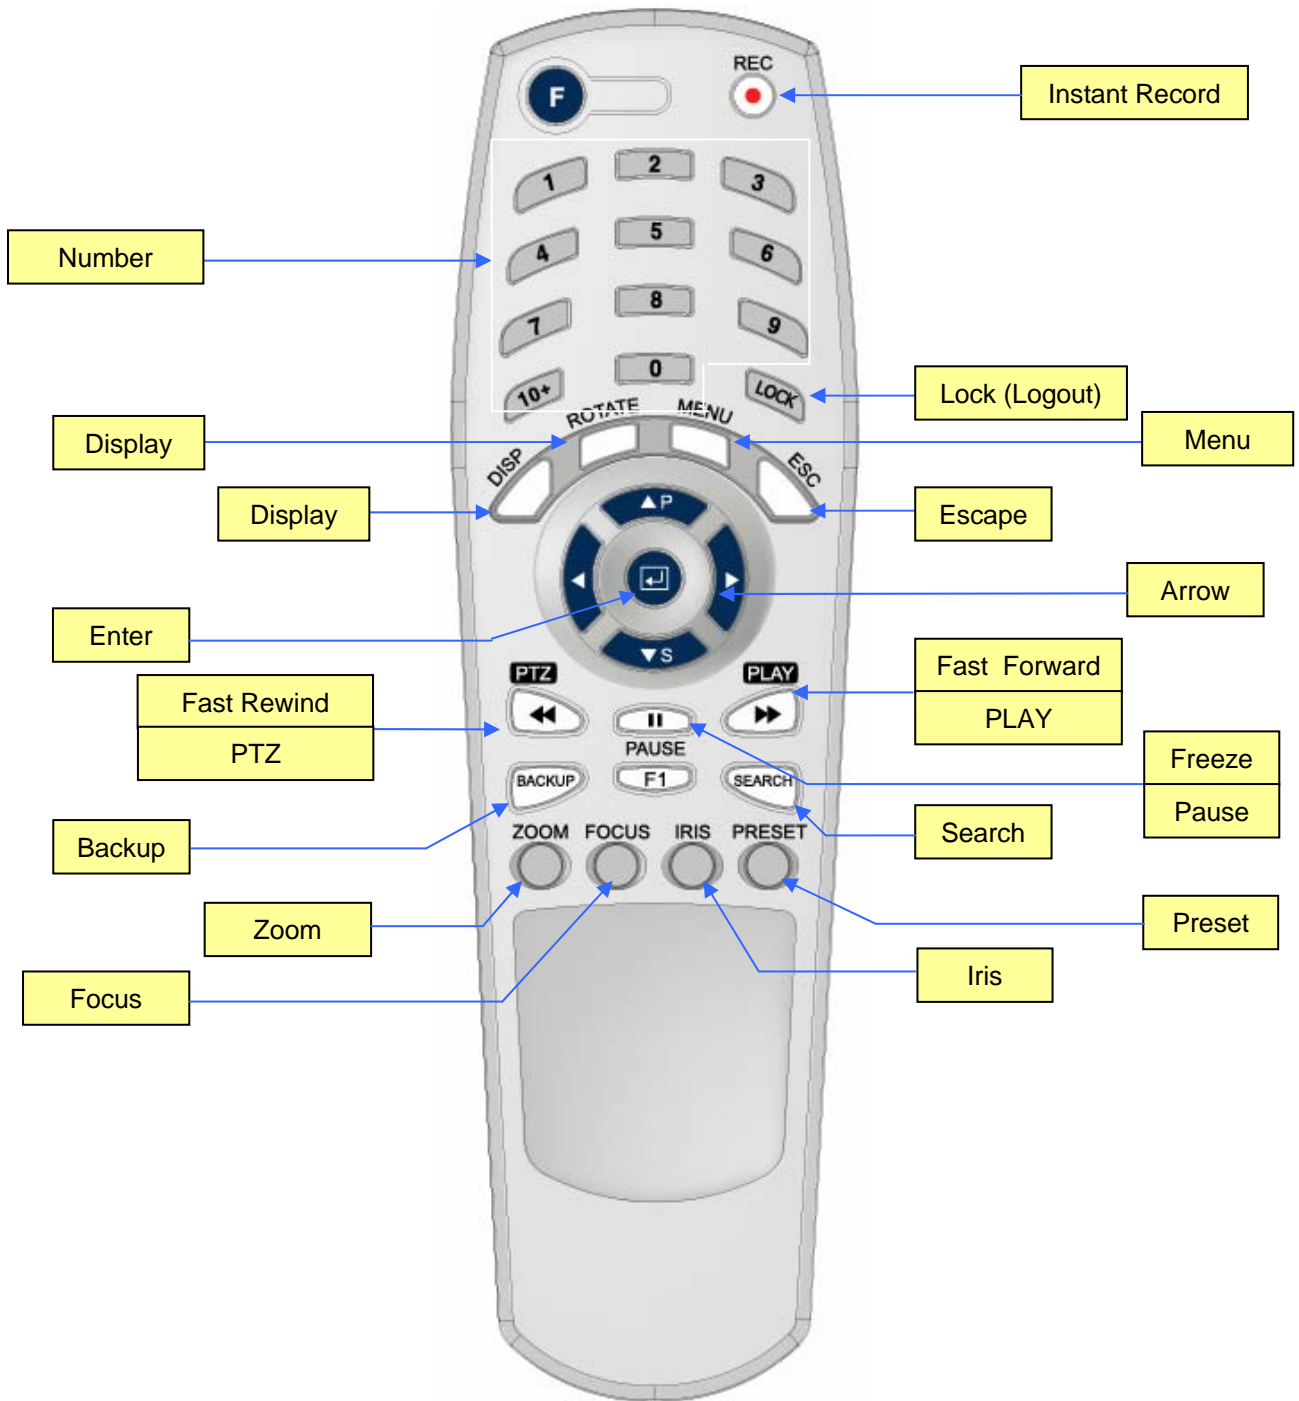

Chapter 3 — Installation

3.1 Connecting the Video Source




Figure 3 — Video input connectors.

Connect the coaxial cables from the video sources to the BNC Video In connectors.

3.2 Connecting the Loop Through Video




Figure 4 — Video Loop Through connectors.

If you would like to connect your video source to another device, you can use the Loop BNC connectors.

NOTE: The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to another terminated device because it will cause poor quality video.

3.3 Connecting the Monitor

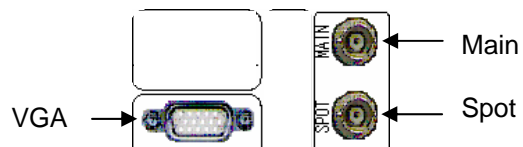


Figure 5 — Video Out connectors.

Connect the monitor to either Main or VGA connector.
Connect the spot monitor to the SPOT connector if required.

3.4 Connecting Audio

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio.



Figure 6 — Audio In and Out connectors.

Your DVR can record audio. Connect the audio source to Audio In. Connect Audio Out to your amplifier.

NOTE: The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The audio input can be from an amplified source or directly from a microphone.

3.5 Connecting Alarms



Figure 7 — Alarm Input connector strips.

NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole above the button. After releasing the button, tug gently on the wire to make certain it is connected.

To disconnect a wire, press and hold the button below the wire and pull out the wire.

AI 1 to 8 (Alarm In)

You can use external devices to signal the DVR to react to events.

Mechanical or electrical switches can be wired to the AI (Alarm In) and GND (Ground) connectors. The threshold voltage is 4.3V and should be stable at least 0.5 seconds to be detected. See Chapter 4 — Configuration for configuring alarm input.

GND (Ground)

NOTE: All the connectors marked GND are common.

Connect the ground side of the Alarm input and/or alarm output to the GND connector.

AO 1 TO 8 (Alarm Out)



Figure 8 — Alarm Output connector strips.

The DVR can activate external devices such as buzzers or lights. Connect the device to the AO (Alarm Out) and GND (Ground) connectors. See *Chapter 4 — Configuration* for configuring alarm output.

3.6 Connecting to the RS485




Figure 9 — RS485 Connector.

The DVR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals. The RS485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX-/TX- and RX+/ TX+ of the control system to the TX-/RX- and TX+/RX+ (respectively) of the DVR. See *Chapter 4 — Configuration* and the PTZ camera or remote controller manufacture's manual for configuring the RS485 connection.

3.7 Connecting to the Network Port

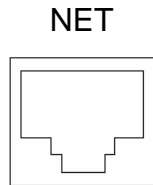


Figure 10 — Network connector.

The DVR can be networked using the 10/100Mb Ethernet connector. Connect a Cat5 cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades. See Chapter 4 — Configuration for configuring the Ethernet connections.

3.8 Connecting to the RS232 Port

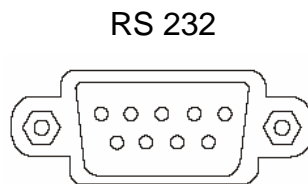


Figure 11 — RS232 connector.

An RS232 port is provided to connect an external modem for remote monitoring and configuration. See Chapter 4 — Configuration for configuring the modem.

NOTE: The DVR is not supplied with a modem cable, and many modems are not supplied with cables. Make certain you have the correct cable when purchasing the modem.

3.9 Connecting to the USB Port

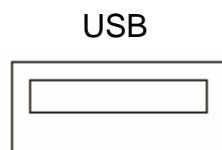


Figure 12 — USB connector.

A USB port is provided to connect external hard disk drives or USB memory sticks for clip copying video. Position the external hard disk drive close enough to the DVR so that you can make the cable connections, usually less than 6 feet. Use the USB cable provided with the hard disk drive to connect it to the DVR. See Chapter 5 — Operation for information on archiving video to an external USB hard disk drive or USB memory stick.

3.10 Connecting to the PTZ Camera Unit

Make a connection of PTZ unit to RS485 at the rear panel of DVR. (See the figure below)

PTZ units currently being supported are Pelco-D/P, NVCC-Z42N, CyberDome(Kalatel), Samung, Samsung Techwin, Sungjin, Dongyang, DRX-500, Fastrax II, Sensormatic, PIH-7600, Eyeview Dome.


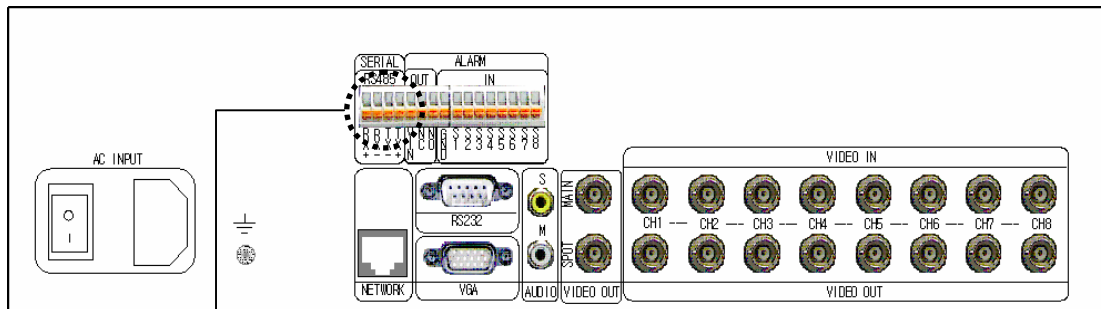


Figure 13 -- DVR Rear Panel

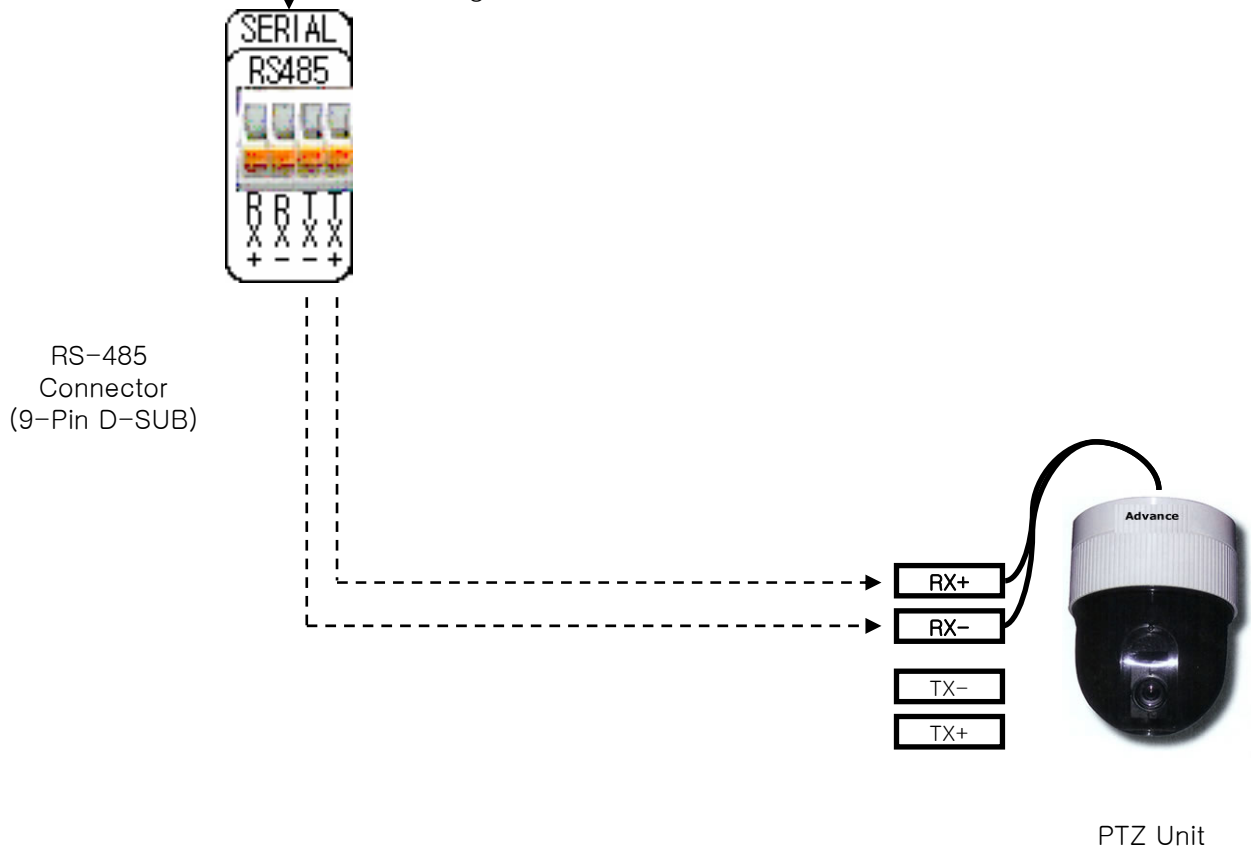

Chapter 4 — Quick Guide

4.1 How to Install

- Install a Hard Disk Drive to your DVR after opening the upper case.
- Connect cameras to the Video In No. 1 ~ 8.
- Connect a Monitor to the Main or VGA. (If necessary, connect the spot monitor to the Spot).
- Connect a Network cable to the Ethernet port.
- Turn on the power sources for cameras, monitor and DVR.

Your DVR will be initialized and it will take approximately 60 seconds. As soon as the DVR completes its initialization process, it will begin showing live video on the attached monitor and playing live audio through the attached speaker. The default mode is to display all cameras at once. Pressing any camera button will cause that camera to display full screen. It displays live video and plays live audio until the user enters another mode.

NOTE: Refer to the Chapter 2 - Installation for more details.

4.2 Common User Interface



Icon	Remark
	This color texts are menu names and just texts.
	This color texts can be highlighted and you can change the setting values.
	These are buttons for detail setup with sub-menu.



When do you move main menu or close, this message will be occurred if you have changed setting value.

If you highlight the OK and press the button, changed values will be applied. But if you highlight the CANCEL and press the button, changed values will be not applied. Just previous values are remained.

4.3 Monitoring

Using front key pad :

Select the desired split screen using the front Display and Sequence keys.

To see the FULL screen, use the front numeric keys.

Using mouse:

Move the mouse to the bottom of screen then activate Bottom Menu to select the split screen.

Move the mouse to the Cameo then click the left mouse button to see the FULL screen.

NOTE: Refer to the Chapter 4 – Operation.

4.4 How to Record

Press the Instant recording button (●) on the front panel. Your DVR will start recording. To stop recording, press this button again.

NOTE: Refer to Configuring Recording Settings in the Chapter 4 - Configuration.

4.5 How to Playback

Click the search button of the front panel of DVR to find the date and time of recorded material for playback. User is able to search the video using the variety of playback methods of choice.

NOTE: Refer to the Chapter 5 – Operation/Searching Video & Playing Video

4.6 How to set up Networking

When using a dynamic IP, turn on the Dynamic IP in the Ethernet Setup menu. When using a static IP, enter the IP information in the Ethernet Setup menu.

Install the SMS software to your PC and add the DVR information to the SMS.

NOTE: Refer to the Ethernet Setup in the Chapter 4 – Configuration and the included SMS manual.

NOTE: You will be asked to confirm the password when pressing the front buttons. The default password is 1111.

Chapter 5 — Operation

5.1 Login to DVR

This system classifies user category as ADMIN, SUPERUSER, USER limiting the access to system operation. Each log-in authority level and access level has been summarized as below, and ADMIN level overrides all.

Press the MENU button to enter the setup screens. The Admin Password screen appears.



Figure 14 — ADMIN PASSWORD.

Enter the password by pressing the appropriate combination of Camera number buttons and then the Enter button. The factory default password is 1111.


The log-in window appears when the following buttons are pressed.

Button (Function)	Log-in Authority
MENU	Admin
SEARCH	Superuser
BACKUP	Superuser
PTZ	User

5.2 Logout to DVR

To log-out from the system click the LOCK button at front panel to brute force log-out or click the Logout button from Top Most Menu using mouse.

The DVR system automatically does log-out after a certain time is elapsed. Menu Timeout that has been set to System Setting is the time for predefined automatic log-out time.

Button	Function	Remarks
	Lock	It locks DVR as Logout stage

5.3 Live Monitoring


NOTE: This chapter assumes your DVR has been installed and configured. If it has not, please refer to Chapters 1 and 2.

The DVR's controls are similar to a VCR. As with a VCR, the main functions are recording and playing back video. However, you have much greater control over recording and playing back video. You can establish recording schedules based on time of day, night and weekend. The DVR allows you to search through the recorded video using much more sophisticated tools than those available with VCRs. Additional DVR features that are not available with VCRs are remote control and viewing, recording video at the same time you are watching previously recorded video, and printing images to a standard printer.



The Front Panel Display and controls are described in Chapter 2 — Front Panel Layout.

As soon as the DVR completes its initialization process, it will begin showing live video on the attached monitor and playing live audio through the attached speaker. The default mode is to display all cameras at once. Pressing any camera button will cause that camera to display full screen. It displays live video and plays live audio until the user enters another mode.


Pressing the DISPLAY button cycles the DVR through the different display formats.

Pressing the AUTO button will cause the cameras to display sequentially on the monitor. When in one of the multi-view formats, pressing the AUTO button after selecting a channel by pressing the  button and moving a square cursor by ▲, ▼, ◀ or ▶ button will cause the DVR to display live cameras sequentially (cameo sequence). Selecting another display mode, or pressing the AUTO button again will exit the Sequence mode.

Pressing the SEQUENCE button allows the manual rotations whenever pressing this button.

When in one of live formats, press the  button and a green square cursor will appear. You can move the cursor by using arrow buttons and press the  button again to pop up the cameo menu. The following screen will appear.

5.4 Live Cameo Menu

When in one of live formats, press the  button and green square cursor will appear. When moving the cursor to the bottom or top, the following pop-up menu will appear.

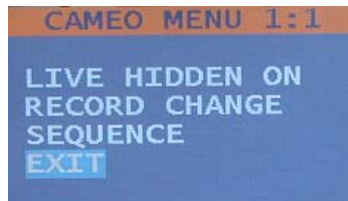



Figure 15 – LIVE CAMEO MENU.

LIVE HIDDEN ON/OFF

You can hidden ON or OFF the live camera to the selected channel. Press the  button after highlighting the LIVE HIDDEN ON or LIVE HIDDEN OFF.

RECORD CHANGE

When selecting the RECORD CHANGE on the above CAMEO menu, the below menu will be popped up.



Figure 16 – CAMEO – RECORD CHANGE.

You can change the recording quality, resolution and recording speed to the selected channel in this menu.

SEQUENCE

When selecting the SEQUENCE on the above CAMEO menu, the below menu will be popped up.

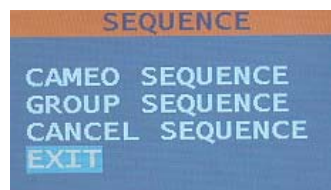



Figure 17 – CAMEO – SEQUENCE.

- CAMEO SEQUENCE : just selected cameo is rotated with the other channels out of monitor.
- GROUP SEQUENCE : all channels in monitor is rotated with the other channels out of monitor.
- CANCEL SEQUENCE : stop cameo sequence or group sequence.

NOTE: you can set rotate frequency on SYSTEM MENU with PLUS MEMU TYPE

5.5 Playback Cameo Menu

When in one of playback formats, press the  button and green square cursor will appear. When moving the cursor to the bottom or top, the following pop-up menu will appear.

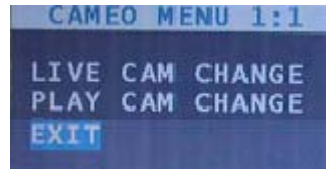




Figure 18 – PLAYBACK CAMEO MENU.

Live and Playback Cameo Change

You can select a cameo camera and change the selected cameo viewer with live or playback viewer that you want to watch channel.

If you want to change the selected cameo to Live Viewer, highlight the LIVE CAM CHANGE and press the  button.


If you want to change the selected cameo to Playback Viewer, highlight the LIVE CAM CHANGE and press the  button.

Then, you can select channel you want to view using below slide menu.



Figure 19 – CAMERA CHANGE SLIDE.

NOTE: If you change cameos using LIVE CAM CHANGE or PLAY CAM CHANGE, changed cameos are preserved until you change cameos, and at next searching and playing also they are preserved. So, to watch default playback cameos you have to highlight the DEFAULT on the upper slide menu and press the  button.

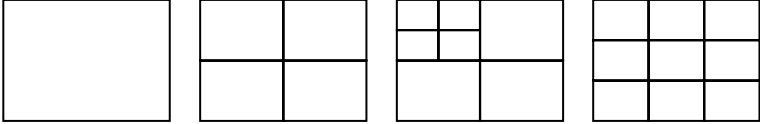Button (Function)	Remarks
DISPLAY	<p>Pressing the button continuously 1, 4, 7, 9 screen display is equentially changed. It helps to monitor efficiently by selecting the choice of screen split.</p> 
ROTATE	<p>Pressing the button allows automatic sequential screen split for 1, 4, 9 etc. For example, press the button with 4 screen displays change into the next 4 different camera input with automatically repeating the sequence.</p>
FREEZE	<p>Temporary stopping for the monitoring screen and press again resume the original screen mode. Reset the USB module.</p>
Enter	Selecting Cameo or displaying Cameo menu
Numeric Key (0-9)	Used for selecting the corresponding camera directly
10+ Num. Key (10+)	Used for entering number greater than 10

5.6 PTZ Control

The DVR will control cameras with Pan, Tilt and Zoom capabilities. Press the PTZ button to enter the PTZ mode. The Mark 'P' is printed on the Cameos PTZ camera is set. And the lowest channel is selected among the PTZ Cameos.

NOTE: PTZ camera have to already be set. Refer to 6.1 'Setup PTZ Camera' for setting.

NOTE: You have to select channel you want to control PTZ camera using numeric buttons.



Figure 20 – PTZ Mode View.

You can control the camera using front panel buttons. Press the Left and Right arrow buttons to pan left and right. Press the Up and Down arrow buttons to tilt the camera up and down.

You can change PTZ mode using front panel buttons, PRESET, ZOOM, FOCUS and IRIS.


- PRESET : PTZ camera is moved to preset location and you can view the location.
- ZOOM : you can zoom in or zoom out PTZ camera.
- FOCUS : you can set focus manually.
- IRIS : you can iris in or iris out.


You can control the camera using front panel buttons or by setting up presets, tour, P-RUN (Pattern Run) or Group.


Press the menu button on the front panel. Then you can see below PTZ menu.




Figure 21 – PTZ MENU.

If you highlight the MOVE in the above menu and press the  button, you can tilt the camera. Press the Left and Right arrow buttons to pan left and right. Press the Up and Down arrow buttons to tilt the camera up and down.

If you highlight the ZOOM in the above menu and press the  button, you can zoom the camera. Press the Fast Forward and Rewind button to zoom in and out.

If you highlight the FOCUS in the above menu and press the  button, you can set focus of camera using Left and Right arrow buttons.

But if you highlight the SET beside of AUTO FOCUS in the above menu and press the  button, camera focus will be set automatically.

You can turn on or turn off the light on the camera by toggling ON and OFF beside LIGHT if there is a light on the camera.

You can also turn on or turn off the camera by toggling ON and OFF beside POWER.

You can toggle TOUR ON and TOUR OFF. If TOUR state is ON, camera will be moved along the already set PRESET GROUP until TOUR OFF. The PRESET GROUP has to be already set.

NOTE: Refer to Chapter 5 – PTZ Control - PRESET

You can toggle P-RUN ON and P-RUN OFF. If P-RUN state is ON, camera will be moved along the already set PATTERN until P-RUN OFF. The PATTERN has to be already set.

NOTE: Refer to Chapter 5 – PTZ Control - PATTERN

NOTE: Tour and P-RUN can't be turned on at the same time.

NOTE: Of course, if your camera does not support some function, when you try that function, it will be not accomplished.

P-RUN(PATTERN RUN)


Press the PATTERN button to set up the Pattern. Then the below pattern menu will be appeared.




Figure 22 – PTZ -PATTERN.

First, you have to highlight the START beside the PATTERN and press the  button to set pattern. Then the START is toggled to the STOP.


You can save pattern until you highlight the STOP beside the PATTERN and press the  button.

Move, zoom or focus the camera by using front panel buttons as described above. Highlight the STOP beside the PATTERN and press the  button again, your DVR will save the movements (Pan/Tilt/Zoo).

NOTE: One pattern can be saved to your DVR.

If you highlight the PTZ and press the  button, the menu will be changed to the previous PTZ menu.

You can use P-RUN (Pattern run). Highlight the PATTERN OFF and press the  button to use Pattern Run.

Your camera will move automatically along the set pattern until you turn off the PATTERN, highlighting the PATTERN ON and pressing the  button.

PRESET

Your DVR can save 64 presets. Follow the next steps to set up presets. Select the preset number and move the camera by using the front panel buttons and press the ESC button to save the preset location.

You can assign presets up to 6 to a preset group and set up the dwell time and speed. Select a preset number, press the Time button and set up the dwell time. When pressing the TIME again, the button will change to Speed. Press the Speed button and then you can set up the moving speed. Press the ADD button. After adding 6 presets or less, press the Save button to save the preset group.

To run the preset group, turn on the Tour in the upper menu. Your PTZ camera will tour the assigned preset group.







NOTE: The Time is the dwell time on a preset position.

NOTE: The pattern recalls all the movements, panning, tilting and zooming.

NOTE: The preset recalls the preset location.

NOTE: The Group means the preset group.

NOTE: The Tour means the preset group tour.

Button (Function)	Remarks
PTZ 	Change to PTZ mode. Zoom out / Focus out / IRIS close
	Zoom in / Focus in / IRIS open
Num. Key (0-9)	Allows to move to the corresponding number of camera.
Menu	Popup PTZ menu in PTZ mode.
ESC	Cancel PTZ mode and move back to LIVE mode. Returns to the previous menu
Up 	Moves camera to upward. Zoom in or focus out
Down 	Moves camera to downward. Zoom in or focus in
Left 	Moves camera to left
Right 	Moves camera to right

5.7 Recording Video & Audio

Recording Video

Once you have installed the DVR following the instructions in *Chapter 3 – Installation*, it is ready to record. Unless you change the setup, the DVR will start recording when you press the REC button on the front keypad..


Although you will be able to record without changing the unit from its original factory settings, you will want to take advantages of the DVR's many tools. See *Chapter 4 – Configuration* for detailed descriptions of the recording mode options of the recording mode options. Here is a brief description of some of the settings:

Recording Audio

If the DVR was set up to record audio. It will record audio when video is recording.

NOTE: Make certain you comply with all local federal laws and regulations when recording audio.

Recording Cameo Window

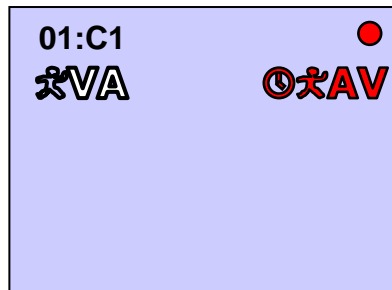


Ch 1 Cameo Window

 : Time Recording

 : Motion Recording

 : Alarm Recording

 : Videoloss Recording

Button	Function	Remarks
	Record	Start and stop recording button for the current schedule setting

5.8 Searching Video

You can select the media by changing the device beside TARGET. You can playback the recorded video from HDD (Hard Disk Drive), CD or USB.

There are five ways of searching the recorded data on DVR.

QUICK SEARCH : Search for the recorded video data by date/time.

EVENT SEARCH : Search for the event occurred by search date.

OVERLAPPED LIST : Search for the data with overlapped date.

GO TO LAST : Search for the data which are recorded 10 minute ago from the current time.

GO TO FIRST : Search for the data which are recorded at the earliest time among data in the Target device.

GO TO JUMP : It is possible to jump by hour or minute. this menu just present on playing recorded video.



Figure 23 – SEARCH MENU.

QUICK SEARCH



Figure 24 – QUICK SEARCH 1.

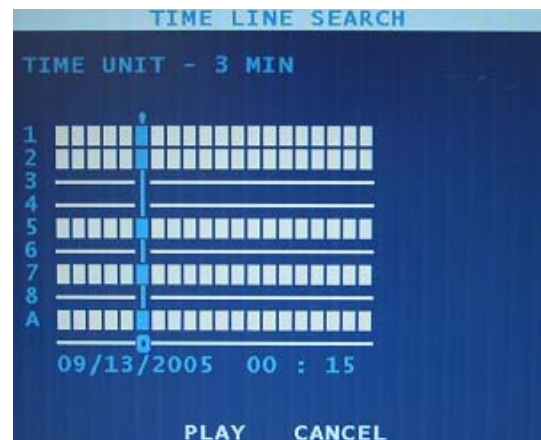





Figure 25 – QUICK SEARCH 2.

Days with recorded video listed. You can highlight number of the day with recorded video and press the  button to select it.

A time bar will be displayed on the TIME SEARCH screen. Hours in which video was recorded will be highlighted with blue. You can use Left and Right arrow buttons to highlight the time bar. Once the time bar is highlighted, you can select time by using the Left and Right arrow buttons.

After selecting hour, you can select the time by the three minutes by pressing the  button.

To play the recorded video, highlight the PLAY and press the  button.

EVENT SEARCH

Select the EVENT SEARCH in the SEARCH menu.

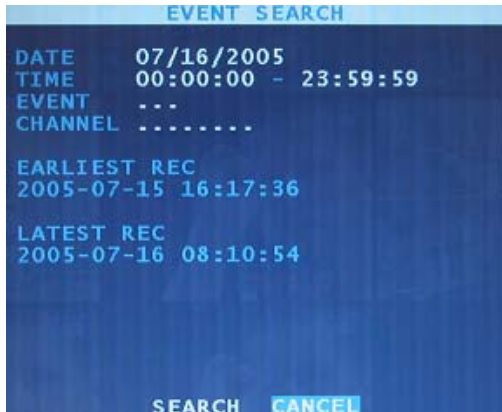


Figure 26 – EVENT SEARCH.

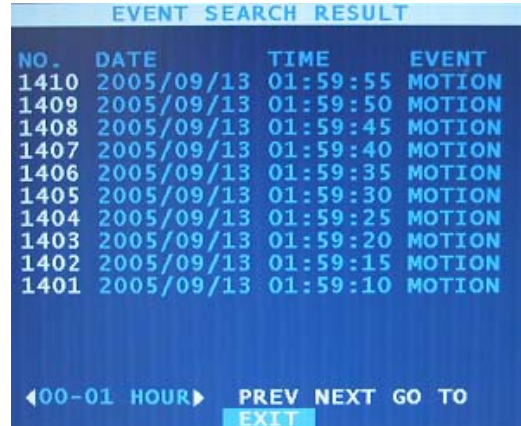



Figure 27 – SEARCH RESULT.

The EVENT SEARCH screen will display changeable Date/Time, recorded information and channel selection. You can change the date/time and select the channels that you want to search.

You can search the recorded video by Motion, Alarm In and Video Loss by turning on or off. Once have selected the events and channels for searching, highlight the SEARCH and press the  button.

You will be having a recorded list with events and you can playback by selecting one of them on the list.

OVERAPPED LIST

You can have an overlapped list by selecting OVERAPPED LIST in the SEARCH menu. You can select one of the video files in the list and playback. Your DVR will create the overlapped video list caused by Date/Time changes or applying the DST (Daylight Saving Time).




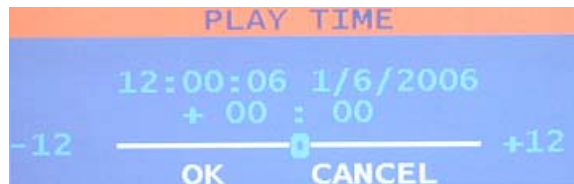


Figure 28 – OVERLAPPED LIST.

Button	Function	Remark
	Search	The very first button to use for search. Pressing the button displays the event search window on screen to search by Year/Month/Day.
	Enter	During the playback, it change the playback mode from Timeline to Hour or Minute

GO TO JUMP

It is the function allows to jump into the desired time frame. It is possible to jump by hour or minute. It is possible to perform the function on playing recorded video without PAUSE or STEP PLAYBACK.

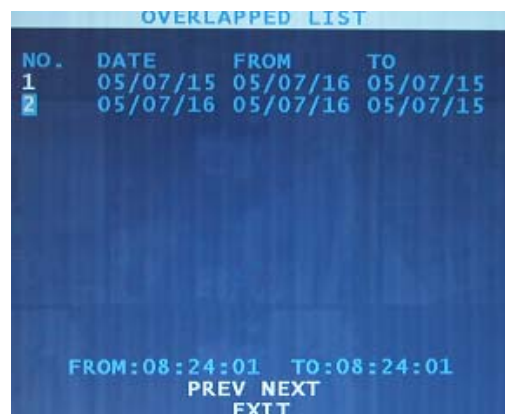

5.9 Playing Video

Normal Playback

It means a normal playback.

It supports forward/backward playback as well as playback speed and pause.

Single Step Playback

Single step playbacks the screen display one frame at a time by pressing up/down button during the pause stage. If you press the button again, it returns to Normal Playback mode.

Single Step playback is useful for the viewing of specific video image in details.

Smart Playback

Pressing the Status button from Normal Playback mode, Smart Playback is activated.

Smart playback is a function that allows to display Alarm In section after searching the video that has movement. Forward/Backward playback is possible and pressing Status button during the playback changes to Normal Playback mode. Pressing Status button once again will resume the Smart Playback mode.

It is convenient to search and playback the incident that occurred over a given single day.

Panorama Playback



Pressing up direction key from a single screen playback mode changes to 4/9/16 screen panorama viewing mode. When it goes to single screen, the mode is changed to Normal Playback.



Panorama playback does display a single frame of the video into several screen frame by frame.

It is very useful feature to monitor a specific video image being changed into.

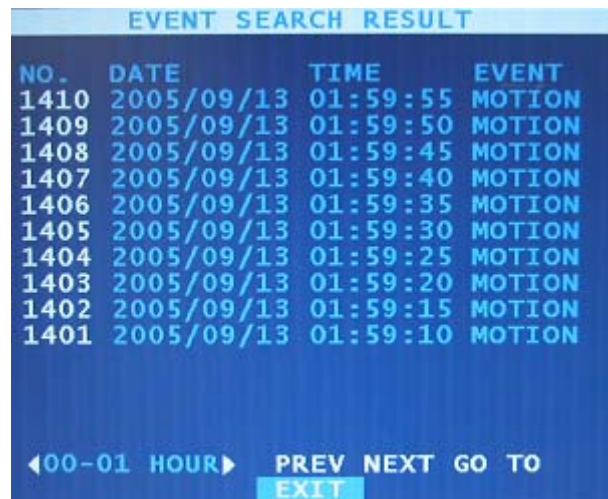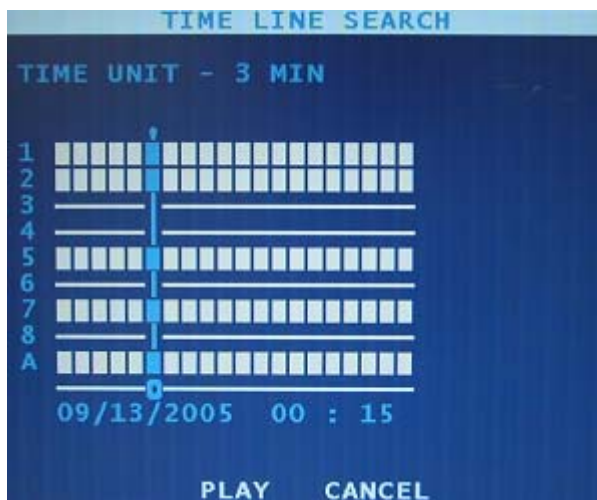



Normal Playback

Normal playback means a steady speed playback. Pressing PLAY button allows to display the video that has been searched through Searching Video.




High-speed Playback ( , )

During the playback, press FAST REWIND or FAST FORWARD button.

Low-speed Playback ( +  ,  + )


After stopping the playback, press FAST REWIND or FAST FORWARD to have low-speed playback. It supports up to 4 different speeds.

Step Playback ( +  ,  + )

When playback is paused, UP or DOWN button is changed to Step Button. Clicking the Step Button allows to playback one frame at a time.


Smart Playback












It is ideal playback for video with many movements. It is useful for fast checking of video clips.

Pressing the S key () in front panel works the same.

Panorama Playback

During playback select panorama from Cameo Menu, then select number of screens to be displayed. If

you press P key () during the single screen display, panorama is play backed. Up key controls the number of splitting screens.

Button	Function	Remarks
	Search	The first button to sue for search. Pressing the button displays calendar search and event search window.
	Escape	Cancel the playback and change to live screen mode
	Enter	Select Cameo from playback screen
	Fast Rewind	Playback speed up and down control for backward direction Use the button to change Cameo into live or playback mode
	Fast Forward	Playback speed up and down control for forward direction Use the button to change Cameo into live or playback mode
	Pause	Temporary stopping of playback
	Forward Play	Forward playback of video data
	Reverse Play	Backward playback of video data
	Up	Panorama playback mode select key. Step playback with PAUSE.
	Down	Smart playback mode select key. Step playback with PAUSE.
	Display	Change the split mode of playback screen

5.10 Copy Video Clip

This is the function that allows to copy a part of video clip during play back into USB or other recording media.

There are two ways of using it with cameo menu and front keys.

Using the front keys on PLAYBACK



- Click the BACKUP key for starting time
- Section to copy is made, click the BACKUP key again
- After that, click the BACKUP key of front keys



Make a copy after confirming the user selected channel and time frame.

Select CD or USB for storage media from TARGET.

- **DvrPlayer** is copied into backup CD or USB device automatically.
- Backup video can be played using **DvrPlayer**.
- (※ [DvrPlayer : Single channel video player similar to Windows Media Player](#))

Button	Function	Remarks
	Backup	Pressing the button displays GUI for data backup to the saving device.
	Spot	Set the beginning/ending video data fro backup during the playback.

5.11 Backup Video Data

BACKUP TO THE INTERNAL CD-RW

You can backup the recorded video to the built-in CD-RW. Press the BACKUP button on the front or remote. The following Backup screen will be appeared. 그리고 CHANNEL 옆의 박스를 누르면 오른쪽 그림과 같이 서브 메뉴창이 떠서 채널을 선택할 수 있다.

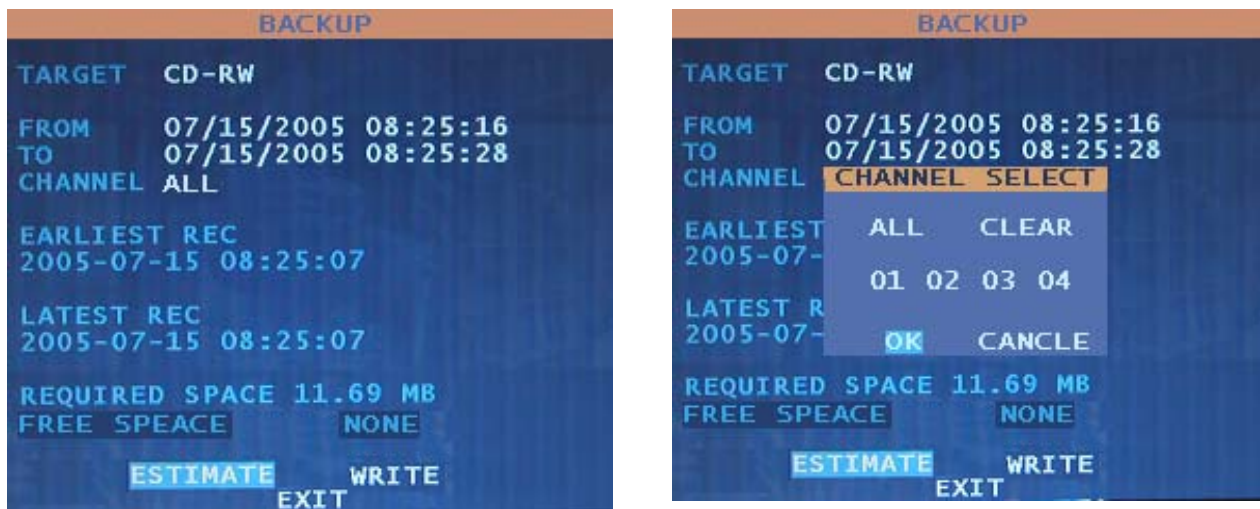



Figure 29 – BACKUP.

You can set up the Date/Time for backup and select the channels. Press the ESTIMATE button and your DVR will calculate the data size and display beside the REQUIRED SPACE. Press the WRITE button and your DVR will prepare the burning to a CD and the CD space is limited up to 650MB.

NOTE: When the data size is bigger than 650MB, you will be asked to put a new CD after burning the first CD.

You will be asked to confirm to backup the data to a CD.

- **DvrPlayer** is copied into backup CD or USB device.
- Backup video can be played using **DvrPlayer**.
- (※ [DvrPlayer : Single channel video player similar to Windows Media Player](#))

Button	Function	Remarks
	Backup	Pressing the button displays GUI for data backup to the saving device.

Chapter 6 — Advanced Settings

Before using your DVR for the first time, you will need to establish the initial settings. This includes items such as time and date, camera, audio, remote control, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.


Press the MENU button to enter the setup screens. The Admin Password screen appears.



Figure 30 — ADMIN PASSWORD.

Enter the password by pressing the appropriate combination of Camera number buttons and then the Enter button. The factory default password is 1111.

6.1 System Setting

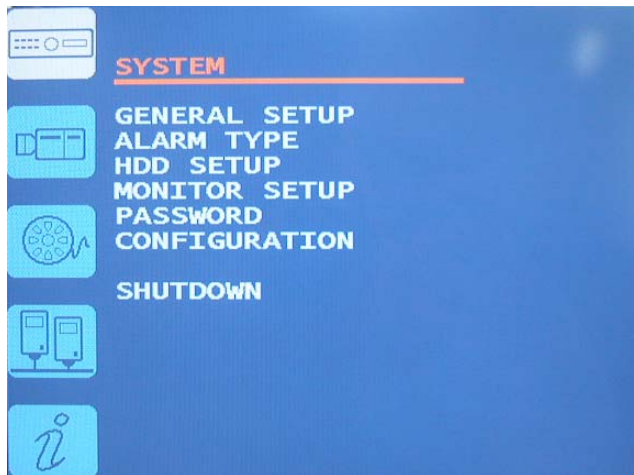

Configuring System Settings

SYSTEM SETUP is the General Setup ,video format , date, time format and so on.


You can reboot or shutdown system in this menu.

GENERAL SETUP

Select the GENERAL SETUP in the main menu and the GENERAL SETUP screen displays language, date format, time zone, date display, time and buzzer.




Figure 31 – GENERALSETUP.

You can change the LANGUAGE. Highlight the box beside of LANGUAGE and press the  button to change language.





You can select the date format and time zone by highlighting the boxes beside and pressing the  button.





NOTE: When selecting a time zone, the DST (Daylight Saving Time) will be applied in case of using the DST in your region and also your DVR will reboot the system automatically.

NOTE: When selecting the DST OFF, the DST (Daylight Saving Time) will not be applied.

You can turn on or off OSD (On Screen Display) for the date and time on the screen by highlighting the box beside DATE/TIME and pressing the  button.

NOTE: When turning off the DATE/TIME display, your DVR will not display the date and time information on the screen.

You can set DATE or TIME when DATE or TIME menu is selected, using     buttons.

If you press the  button, value will be increased and If you press the  button, value will be decreased. If you press the  button, cursor will be moved to left value and If you press the  button, cursor will be moved to right value.

If you want BIP sound when you press the button, select BUZZER ON, otherwise select BUZZER OFF.

If you want to use remote controller, you have to set correct remote controller ID. Default is 0.

If you want to change the menu simply, you have to change menu style to BASIC from PLUS. Default menu style is PLUS.

Highlight the value beside of the MENU STYLE and press the  button.

NOTE: You can set up DVR using simple MENU. But Using PLUS MENU you can't set DVR in detail. To set in detail you have to change menu style to PLUS again.

NTP:

NTP reads the UTC standard time from the NTP server and sets the DVR time according to the selected Time Zone.

pool.ntp.org is set by default but you can input other NTP servers as well.

Pressing SYNC NOW synchronizes the DVR time with the standard time.

If AUTO SYNC is on time is synchronized every day. When switching from Off to On, it must be done after SYNC NOW is performed.

When you change the MENU STYLE to PLUS, DVR will ask you to input ADMIN password with below confirm menu.



ALARM TYPE Setup


Select the ALARM TYPE in the main menu and press the  button. The ALARM TYPE screen displays the alarm inputs.



Figure 32 – ALARM TYPE-ALARM IN.

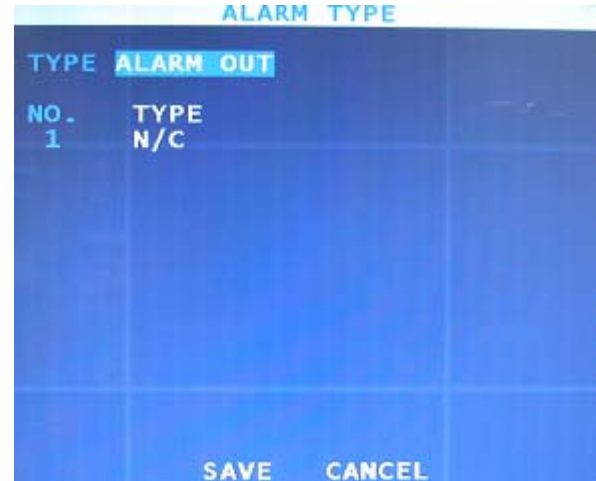




Figure 33 – ALARM TYPE-ALARM OUT.


You select the proper alarm type between NO (Normally Open) and NC (Normally Close) by highlighting the box below TYPE and pressing the  button.

Change TYPE from the ALARM IN to the ALARM OUT button by highlighting it and pressing the  button. The ALARM OUT screen displays the alarm output.

You can select proper alarm type as described earlier.

You can save your changes and return to the main menu by highlighting SAVE and pressing the button. Selecting CANCEL exits the screen without saving the changes.

HDD SETUP

Select the HDD SETUP in the main menu and enter the  button. The HDD SETUP screen will display three pages, INSTALL, OVERWRITE and CHECK.

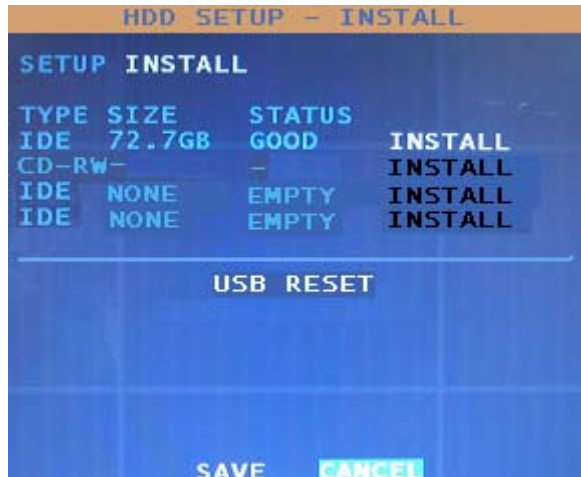



Figure 34 – HDD SETUP – INSTALL .

The INSTALL page will show the HDD (Hard Disk Drive) status and you can initialize new hard disk drives by selecting the INSTALL and pressing the  button.

NOTE: You need to initialize the disks when installing new hard disk drives.

USB가 인식이 안될 경우 USB RESET을 누르면 USB를 다시 인식하여 사용이 가능하도록 한다.

Select the second page, HDD SETUP – OVERWRITE and the following screen will appear.



Figure 35 – HDD SETUP – OVERWRITE.

You can turn on or off the overwriting option by selecting the box beside HDD OVERWRITE.

NOTE: When turning off the overwriting, your DVR will stop recording when the disk is full.

When turning off the overwriting, the boxes beside REMAIN TIME and USED SPACE will be activated.

You can set up the HDD usage by changing the REMAIN TIME and USED SPACE.

NOTE: When setting up the USED SPACE to 80%, your DVR will stop recording at 80%. Your DVR will check the settings of REMAIN TIME and USED SPACE automatically and record as long as possible.


Your DVR has 3 different warning methods when the disk is full but the DISK FULL WARNING must be turned on in the WARNING CONDITION menu.

You can assign a alarm out by selecting the box beside DISK FULL ALARM and turn on the buzzer or OSD (On Screen Display) warning message.

Select the 3rd page, CHECK and the following screen will appear.



Figure 36 – HDD SETUP –CHECK.

The HDD SETUP-CHECK screen will display the earliest and latest recording information and you can check the files in the period, from BEGIN TIME to END TIME by highlighting the START DISK CHECK and pressing the  button.

MONITOR SETUP




Select the MONITOR SETUP in the main menu and press the  button.




Figure 37 – MONITOR SETUP.

You can select the border line color to Black, White or Grey.

You can adjust the transparency of the menu screen by highlighting the box beside ALPHA BLENDING and pressing the  button.


You can set up the menu time-out duration up to 10 minutes by highlighting the box beside MENU TIME OUT and pressing the  button.

You can change the screen positions by clicking the ▲, ▼, ◀ or ▶ button.

Highlight VGA ADJUSTMENT and press the  button. The VGA ADJUSTMENT screen appears.



The ADJUSTMENT screen displays the brightness, contrast, saturation.

Highlight values beside BRIGHT, CONTRAST or SATURATEION and press the  button.

Then Slide window pop up. You can set value and SAVE.

NOTE: Highlight the SAVE button and press the  button to save your changes in the sub-menu.

PASSWORD SETUP

An Administrator password is required to turn the system off, enter the setup screen, load default setups, clear all data, change system date and time and change the Administrator password. Highlight PASSWORD in the Main menu and press to enter the Password screen.



Figure 38 — PASSWORD SETUP.

The PASSWORD SETUP screen displays three different user authorization, ADMIN, Superuser and User. Highlight the ADD or DEL buttons and press the button to add or delete each user. When adding a new user account, you will be asked to enter the new password and to confirm it. When deleting a user account, you will be asked to confirm.

NOTE: The Admin, Superuser and User passwords are composed of up to eight digits using the number buttons. The default Admin password is : 1111.

CAUTION: Don't delete the default Admin account, root before adding a new account. If deleting the default Admin, root before adding at least one Admin account, you can't reach to Menu to set up the system.

NOTE: Superuser can use all functions but can't access to Menu to change the settings. User can use PTZ and Status only.

CONFIGURATION

You can save configurations to DVR system and load from DVR system. Highlight the CONFIG in the main menu and press the button. The following screen will appear.



Figure 39 – CONFIG(1).



Figure 40 – CONFIG(2).

Select SAVE and press the button. The virtual keyboard will appear and you can type the title and you can select the configurations for Camera, Record, System and Network. Press the button after selecting the configurations that you want to save. You can also load the saved configurations to the DVR system.

NOTE: The DEFAULT is the factory default and your DVR will be initialized to the factory default when loading the DEFAULT.

UPGRADE

You can upgrade Software newly using USB memory or CD.

First, connect USB memory to DVR or insert CD.

Next, Highlight UPGRADE and press the button.


Then, Upgrade is performing automatically.

But, You have to select the correct upgrade file, if there are several upgrade files in Device.

SHUTDOWN

You can shutdown your DVR by highlight the SHUTDOWN in the SYSTEM menu and pressing the button.


When you highlight the SHUTDOWN and press the button, You have to input the Admin Password to confirm identification. After then, Your DVR will ask you really want to turn off DVR system.

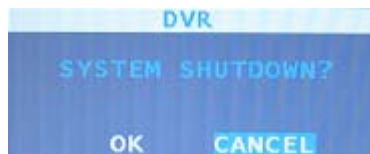

If you highlight OK and press the button, DVR system will be downed.

NOTE: To turn off the DVR, you have to power down after SHUTDOWN. The DVR power switch is at the back of the DVR.


6.2 Camera Setting

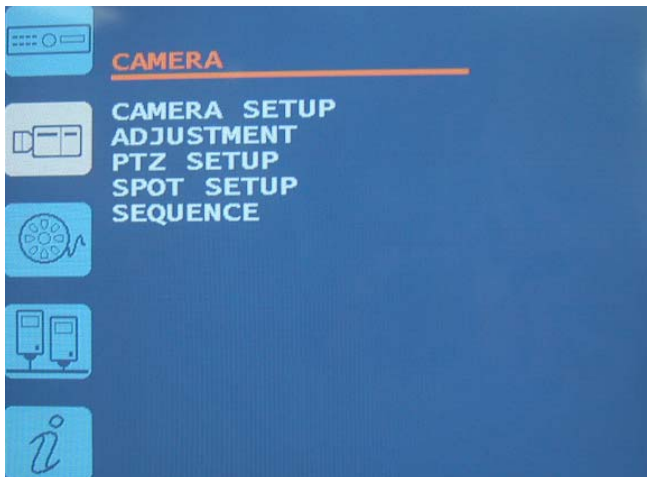

Configuring Camera Settings

This is the menu for general camera setting, camera image color or location control, or setting for PTZ camera

CAMERA SETUP

Highlight CAMERA SETUP in the main menu and press the  button. The SETUP screen appears.

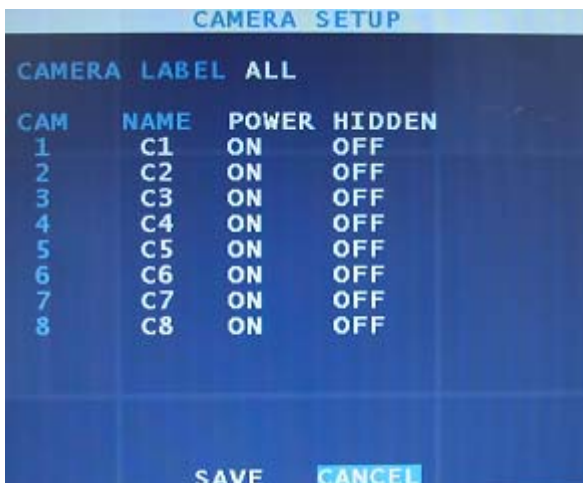


Figure 41 – CAMERA SETUP

The SETUP screen displays the camera label and the camera inputs.

You can turn on or off the camera number and camera name by highlighting the box beside CAMERA LABEL and pressing the button. Select one of the ALL, NUMBER, NAME and OFF.

You can assign names to each camera by highlighting the boxes below NAME and pressing the button. A virtual keyboard allows you to enter camera names.

NOTE: When selecting the OFF, the DVR doesn't display the camera number and name.

You can connect or disconnect the video input by highlighting the boxes below POWER and pressing the button.

NOTE: The button allows you to select ON or OFF.

NOTE: When selecting the OFF, the DVR disconnects the video source so the camera can't be displayed and recorded.

You can hide or display the video of the camera by highlighting the boxes below HIDDEN heading and pressing the button. Select ON or OFF by pressing the button.

You can save your changes by highlighting SAVE and pressing the button. Selecting CANCEL exits the screen without saving the changes.

ADJUSTMENT Setup Screen

Highlight ADJUSTMENT in the main menu and press the button. The ADJUSTMENT screen appears.

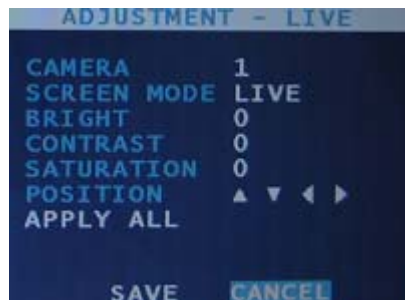



Figure 42 – ADJUSTMENT.

The ADJUSTMENT screen displays the brightness, contrast, saturation, hue and position.

You can select the channel by highlighting the box right CAMERA and pressing the button.

You can select the live or recorded video by highlighting the box below LIVE and pressing the button.


You can adjust the brightness, contrast, saturation and hue by highlighting the headings.


You can change the position of the screen by highlighting the arrow buttons of the POSITION and pressing the  button.

You can apply your adjustments to all the channels by using the APPLY ALL button.

NOTE: Highlight the SAVE button and press the  button to save your changes in the sub-menu.

PTZ SETUP Screen

Highlight PTZ SETUP in the main menu and press the  button. The PTZ SETUP screen appears.

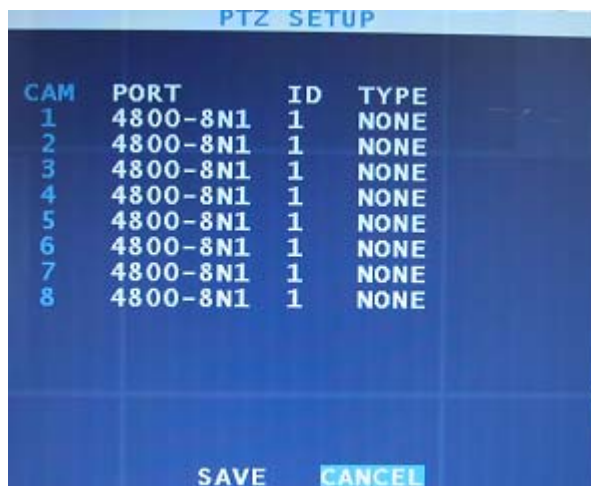

CAM	PORT	ID	TYPE
1	4800-8N1	1	NONE
2	4800-8N1	1	NONE
3	4800-8N1	1	NONE
4	4800-8N1	1	NONE
5	4800-8N1	1	NONE
6	4800-8N1	1	NONE
7	4800-8N1	1	NONE
8	4800-8N1	1	NONE

SAVE CANCEL


Figure 43 – PTZ SETUP(1).





NO.	CONTENT
6	CyberDome (KALATEL)
7	Samsung
8	Samsung Techwin
9	Sungjin
10	Dongyang
11	DRX-500
12	DS120


PREV NEXT
EXIT

Figure 44 – PTZ SETUP(2).

You can set up the baud rate, data bit, parity and stop bit by highlighting the boxes below PORT and press the  button.

You can set up IDs for each channel on the ID heading by highlighting the boxes below ID and press the  button.

You can set up PTZ camera type by highlighting the boxes below TYPE and press the  button.

Select your camera from the list and press the  button

You will need to connect the camera to the RS485 terminal on the back of the DVR following the camera manufacturer's instructions.

SPOT SETUP

Your DVR can set up 1 spot monitors. Highlight the SPOT SETUP in the main menu and press the button. The following SPOT SETUP screen will appear.

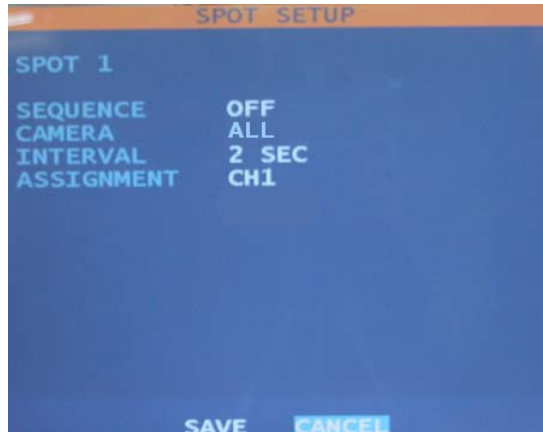


Figure 45 – SPOT SETUP.

You can turn on or off the Rotation for cameras for spot. Turn on or off the ROTATE by highlighting the ON or OFF below ROTATE and pressing the button.

You can turn on or off the SPOT out by highlighting the ON or OFF below CAMERA and press the button.

You can set up the rotating dwell time by highlighting the box below INTERVAL and pressing the button. It can be set up to 256 seconds.

SEQUENCE

You can set up the dwell time and the sequence for rotation. Select the SEQUENCE in the main menu and press the button. The following screen will appear.

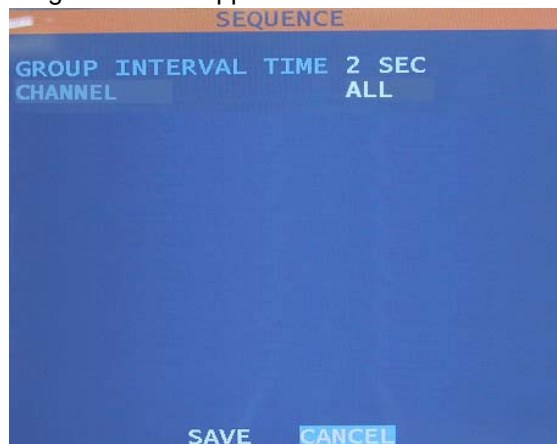


Figure 46 – SEQUENCE

6.3 Record Setting



Configuring Recording Settings

Your DVR offers a variety of flexible recording modes. You can set it up to record all the time or to only record events. It can be set up to continue recording once the hard disk drive is full by recording over the oldest video, or you can set it up alert you when the hard disk is full and stop recording.

SCHEDULE SETUP Screen

Highlight SCHEDULE SETUP in the main menu and press the button. The SCHEDULE SETUP screen appears.



Figure 47 – SCHEDULE SETUP.





Figure 48 – SCHEDULE SETUP – RESOLUTION.



You can set up day time period by highlighting the boxes beside DAY and pressing the button.

NOTE: The night time period is changed automatically, according to the setting of the day time.

You can set up weekend and add or delete holidays in the HOLIDAY SETUP menu by highlighting the ▶ button in the HOLIDAY heading and pressing the button.

You can select the resolution between standard resolution and high resolution by highlighting the box beside RESOLUTION and pressing the  button.

If you want to change the resolution of certain cameras, press the  button in the RESOLUTION heading.

CAUTION: Your changes in the SETUP screens are applied to every channels, days and other items. If you want to change certain details, enter to the sub-menu by highlighting the  button and pressing the  button.

You can turn on or off the EVENT MESSAGE, RECORD MESSAGE, RECORD MARK and EVENT POPUP in the SCHEDULE SETUP menu.

You can set up whether messages are displayed or not.



EVENT MESSAGE is appeared when set EVENT is occurred.

RECORD MESSAGE is appeared when DVR is recording.

RECORD MARK is appeared when DVR is recording.

Highlight the EVENT MESSAGE , RECORD MESSAGE or RECORD MARK and press the  button to toggle ON and OFF to use each message.

NOTE: Under-side table refers to three event message , four recording message and one recording mark.

	Motion event message
	Video loss event message
	Alarm event message
	Motion recording message
	Video loss recording message
	Alarm recording message
	Time recording message
	Recording mark

NOTE: When turning on the EVENT POPUP, the event screen will be popped up to the full screen when certain events are activated.

TIME RECORD SETUP


Highlight TIME RECORD SETUP in the main menu and press the  button. The TIME RECORD SETUP screen appears.



Figure 49 – TIME RECORD SETUP.

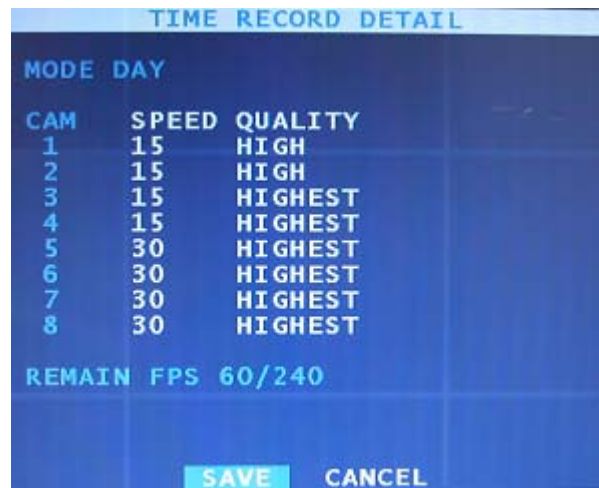





Figure 50 – TIME RECORD SETUP – SPEED AND QUALITY.

The TIME RECORD SETUP screen displays recording settings for Day, Night and Weekend.


Highlight the RECORD heading on DAY, NIGHT, or WEEKEND and press the  button to toggle between ON and OFF.

You can set up the recording speed and select the recording quality between STD, HIGH, HIGHEST and SUPER.

NOTE: To select the recording speed, use the  button.

You can change the certain details by highlighting the DETAIL button() and pressing the  button.


EVENT SETUP

Highlight EVENT SETUP in the main menu and press the  button. The EVENT SETUP screen appears.


The DVR can be set to react to events differently. Each sensor can be assigned to a camera, recording speed, video quality and dwell time.



Figure 51 – EVENT RECORD SETUP.

Highlight the INPUT, MOTION or VIDEO LOSS in the EVENT INPUT menu and press the  button to toggle between ON and OFF.

NOTE: When turning off the input, you can't select event inputs, MOTION, ALARM IN or VIDEO LOSS.

Highlight the  button in the EVENT INPUT menu to change the motion detection area for each camera, or change details for certain cameras. The following EVENT SETUP – INPUT screen will appear.

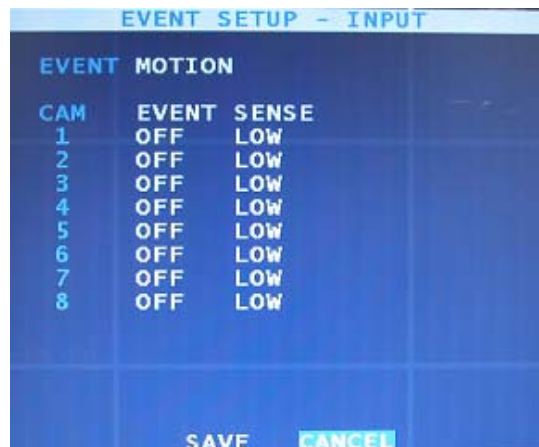


Figure 52 – EVENT SETUP – INPUT.

NOTE: Highlight and press the button beside of the EVENT then MOTION, VIDEO LOSS and ALARM IN will be toggled and you can set each details.

You can set up the motion event ON/OFF and sensitivity of each camera in the MOTION menu.



Highlight the MOTION beside of the EVENT and press the  button to set up the alarm input. The following ALARM IN screen will appear.



Figure 53 – EVENT SETUP – INPUT - ALARM IN.

You can select cameras which will be associated with the each alarm.

When the Record in EVENT OUTPUT menu is ON state, the video of associated camera will be recorded when alarm input event is occurred.

Highlight the ALARM IN beside of the EVENT and press the  button to set up the VIDEO LOSS. The following VIDEO LOSS screen will appear.

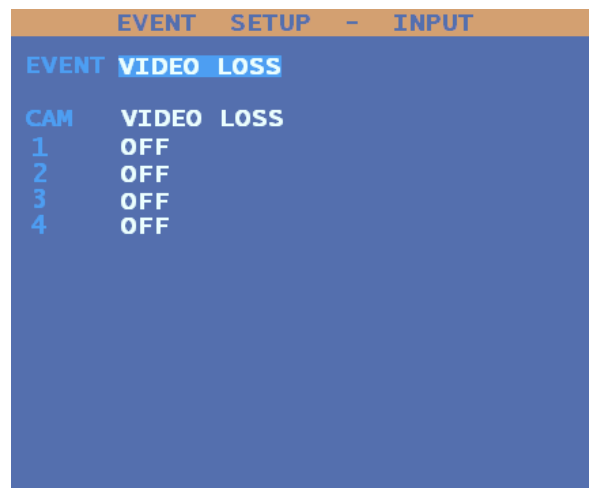


Figure 54 – EVENT SETUP – INPUT - VIDEO LOSS.

You can select cameras which will be associated with the video loss.

If the Record in EVENT OUTPUT menu is ON state, the video of associated camera will be recorded when video loss event is occurred.

To set up EVENT RECORD, Highlight the INPUT beside of the EVENT SETUP on EVENT RECORD SETUP menu and press the button. The EVENT RECORD SETUP menu will be changed as below window. And you can select the RECORD ON/OFF, SPEED, QUALITY or POST RECORDING dwell time.



NOTE: The speed in the EVENT OUTPUT menu will be associated with the resolution setting in the SCHEDULE SETUP menu. When selecting the STD resolution in the SCHEDULE SETUP menu, the maximum speed will be 30fps. In case of selecting HIGH resolution, the maximum speed will be 15fps.

You can select the quality by toggling between STD, HIGH and HIGHEST and this selection is not effecting the recording frame per sec. When selecting Highest, it gives better image quality but the file size will be bigger than STD or HIGH.

You can set up the Post Recording time up to 100 seconds by highlighting the below box and pressing the button. Highlight the ► button and pressing the button to change the details in the sub-menu.




Figure 55 – EVENT SETUP – RECORD.



Figure 56 – EVENT SETUP-RECORD-DETAIL

You can turn on or off the recording and change the speed and image quality for Day, Night and Weekend. Also, you can change the settings for certain cameras in the sub-menu by highlighting the ► button and pressing the button.

To set up EVENT ACTION, Highlight the RECORD beside of the EVENT SETUP on EVENT RECORD SETUP menu and press the  button. The EVENT RECORD SETUP menu will be changed as below window.

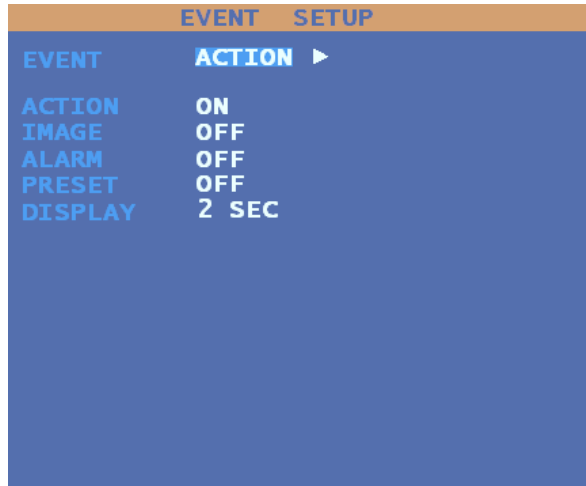




Figure 57 – EVENT SETUP

You can set up event actions by toggling between ON and OFF for Image, Alarm and Preset, and you can also set up the popup screen dwell time by highlighting the DISPLAY button and press the  button.

Highlight the ▶ button and press the  button to change certain details in the sub-menu. The following EVENT SETUP-ACTION screen appears.

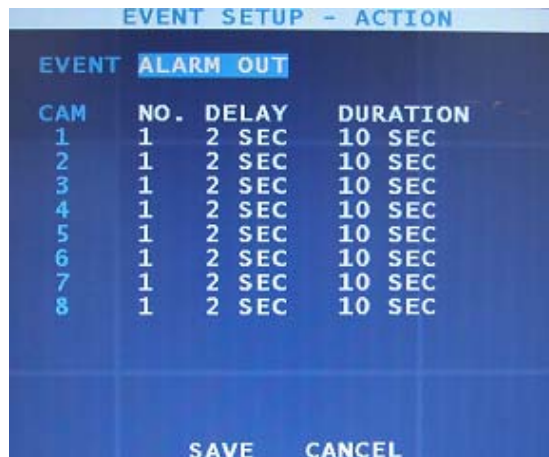


Figure 58 – EVENT SETUP-ACTION.

You can associate the ALARM OUT, DELAY and DURATION for each camera by highlighting the action type beside of the EVENT and pressing the  button and toggle ON and OFF for VOD and E-mail.

NOTE: To associate the preset for each camera, PRESET must be set in PTZ menu. Refer to Chapter 5 – PTZ control (PRESET).

NOTE: When turning on the VOD, the DVR will send an email with a video clip but E-mail must be turned on.

AUDIO RECORD SETUP

Highlight the AUDIO RECORD SETUP in the main menu and press the button. The AUDIO RECORD SETUP screen appears.




Figure 59 – AUDIO RECORD SETUP.

You can turn on or off the audio recording by highlighting the boxes beside DAY, NIGHT, WEEKEND or LIVE and pressing the button.

You can also turn on or off the audio output on playback as select PLAYBACK ENABLE or DISABLE.

You can also set up the volume.

6.4 Network Setting

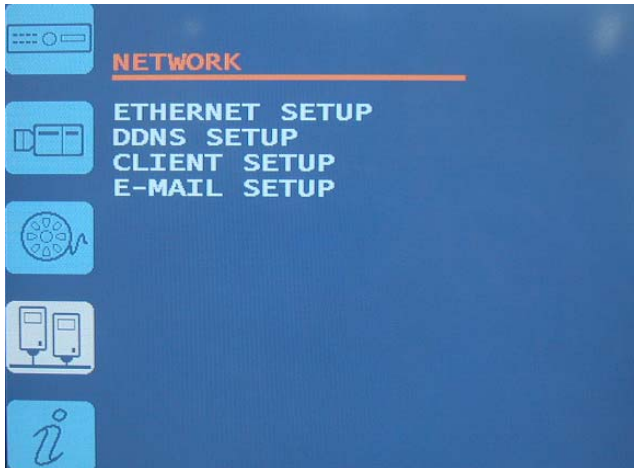

Configuring Network Settings

Control communication related setting from DVR.

It not only sets for commonly using Ethernet, but also monitors the status of server from a remote site through the Client and E-mail setting.

ETHERNET SETUP


You can turn on or off the dynamic IP by highlighting the box beside the DYNAMIC IP and pressing the  button.







Figure 60 – ETHERNET SETUP.

When turning off the Dynamic IP, you can enter the static IP information.

You can set HOST name using the virtual keyboard.

NOTE: Refer to Appendix B – How to use the virtual keyboard.

You can set IP ADDRESS, SUBNET MASK, GATEWAY and DNS using     buttons.

If you press the  button, value will be increased and If you press the  button, value will be decreased. If you press the  button, cursor will be moved to left value and If you press the  button, cursor will be moved to right value.

DDNS SETUP


Highlight the DDNS SETUP in the main menu and press the  button. The following DDNS SETUP screen will appear.




Figure 61 – DDNS SETUP

Select the DDNS server your DVR already has been registered.
Input ID ,PASSWORD and HOST NAME have been registered on the DDNS server using the virtual keyboard.

NOTE: Refer to Appendix B – How to use the virtual keyboard.

PUBLIC IP를 사용한다면 PUBLIC IP를 ON 으로 세팅하고 그렇지 않으면 OFF 로 세팅하여야 한다.
DDNS 서버와의 연결상태가 좋지 않을 경우 STATUS 옆의 CHECK를 눌러 DDNS 서버와의 상태를 알 수 있다.

CLIENT SETUP

Highlight the CLIENT SETUP in the main menu and press the  button. The following CLIENT SETUP – CLIENT screen will appear.

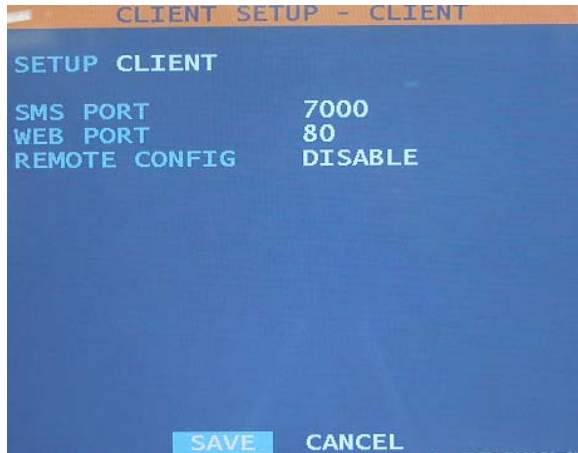


Figure 62 – CLIENT SETUP – CLIENT.

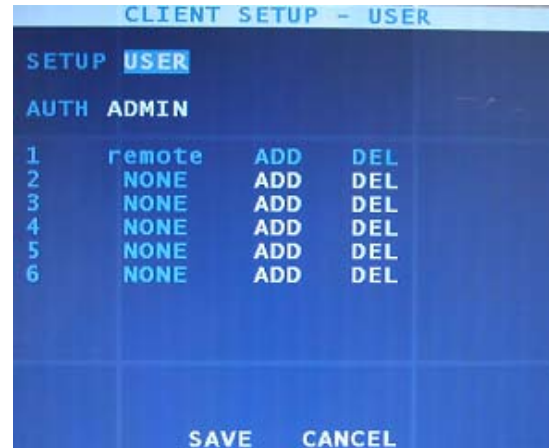



Figure 63 – CLIENT SETUP-USER.

Enter the SMS Port for SMS client connection. The default TCP port is 7000.

Enter the WEB Port for WEB client connection. The default TCP port is 80.

You can select to use the remote configuration by highlighting the boxes beside and press the  button.

Change the setup title beside of the SETUP to USER to add or delete accounts.

You can create new accounts by highlighting ADD button and pressing the  button. Type the new account by using the virtual keyboard. When saving a new account, the password screen will appear. Type the password for the new account. The confirm screen will appear. Retype the password.

NOTE: Refer to Appendix B – How to use the virtual keyboard.

Change the setup title beside of the SETUP to ACCESS to define the IP access range from the client.

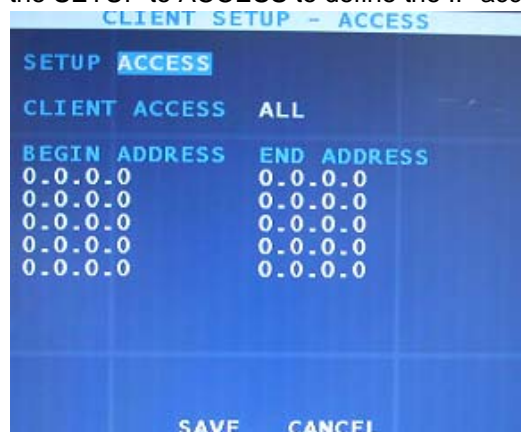


Figure 64 – CLIENT SETUP-ACCESS.

When you change from ALL to RANGE, an IP address of client that is not in the access range can't access to the server. the default range is ALL.

E-MAIL SETUP

Your DVR can notify any event to assigned e-mail addresses and you can assign e-mail addresses up to 6.

Highlight the E-MAIL SETUP in the main menu and press the button. The following E-MAIL NOTIFICATION screen will appear.

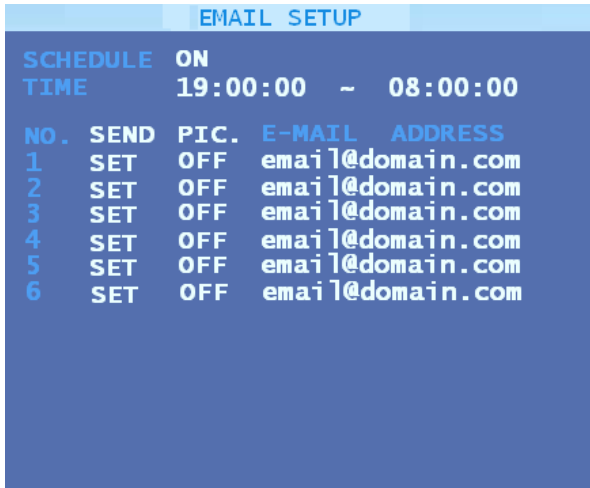


Figure 65 – E-MAIL SETUP(1).

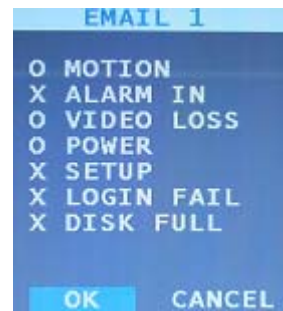


Figure 66 – E-MAIL SETUP(2).

You can associate events for the e-mail notification. Highlight the box below SEND and press the button. Then the event list will appear. If selected event is occurred, email will be sent to associate email address.


설정된 이메일은 SCHEDULE이 ON 일 때는 설정되어진 TIME 범위 안에서만 동작을 하며 SCHEDULE이 OFF 일때는 항상 동작한다.

PIC 밑의 ON/OFF 를 선택하여 이메일에 캡처화면을 첨부할지 여부를 선택할 수 있다.

You can type the e-mail addresses you want to assign by using the virtual keyboard.

NOTE: Refer to Appendix B – How to use the virtual keyboard.

6.5 System Information

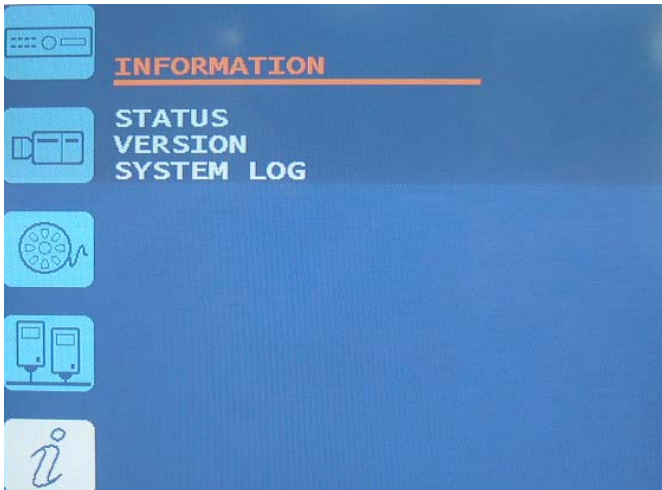

Checking System Information

You can view the information of system, SYSTEM LOG, VERSION and KEY INFO.

Checking Status

You can check the status of the DVR by pressing the STATUS button. The Status screen displays Recording, Event and Audio status and Disk and Key information.

STATUS - WEEKEND			
STATUS RECORD			
CAM	SPEED	RESOL	QUALITY
1	30/15	STD(CIF)	HIGHEST
2	30/15	STD(CIF)	HIGHEST
3	30/15	STD(CIF)	HIGHEST
4	30/15	STD(CIF)	HIGHEST
5	30/15	STD(CIF)	HIGHEST
6	30/15	STD(CIF)	HIGHEST
7	30/15	STD(CIF)	HIGHEST
8	30/15	STD(CIF)	HIGHEST

EXIT

Figure 67 – STATUS.


View Version

You can check the version of your DVR in the VERSION menu. Refer to the below screen. The VERSION screen will display the version information.



View System Log

You can check the system log by selecting the SYSTEM LOG in the main menu. The below screen will appear.

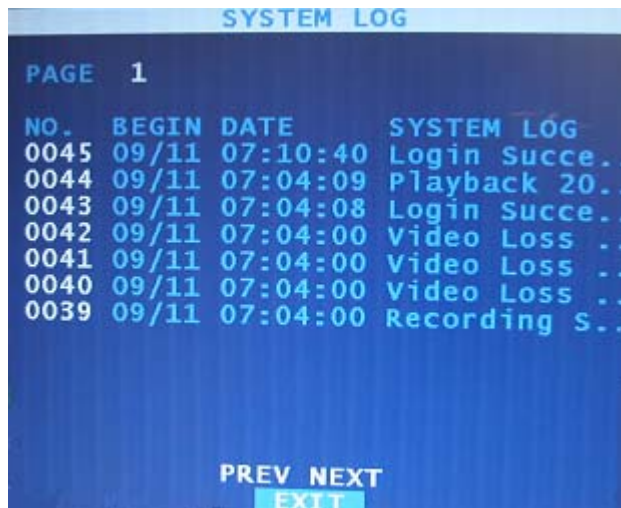

You can move to the previous page or next pages by pressing PREV or NEXT button in the SYSTEM LOG menu.

Appendix A – Reviewing Backup (Clip) Images

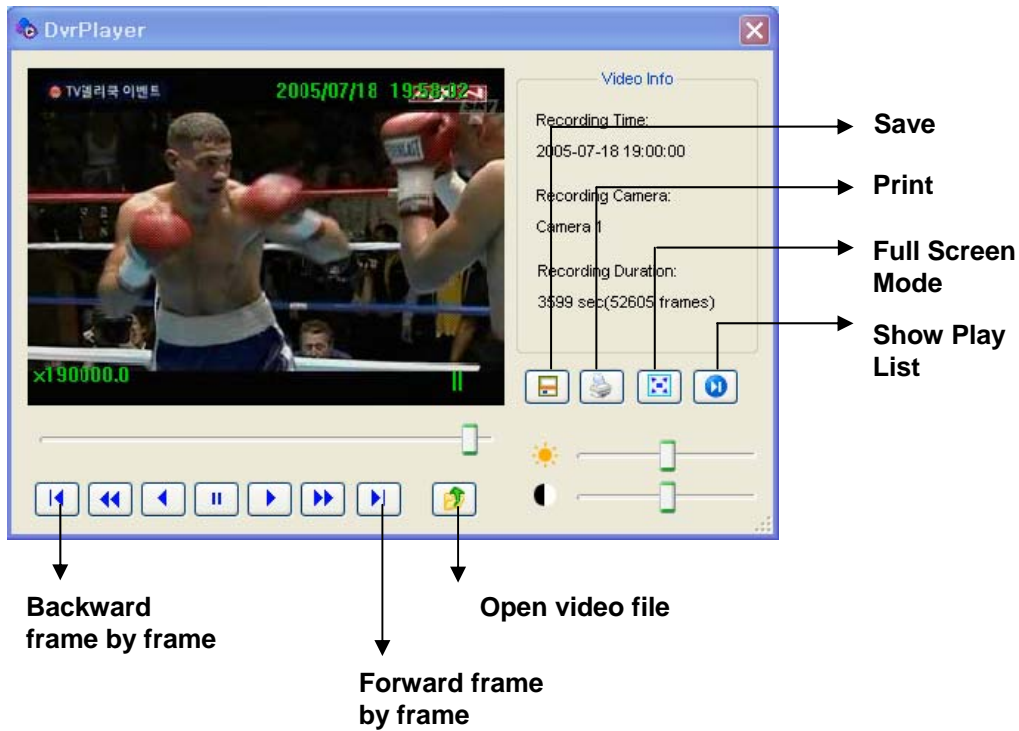


Figure 68 – MINI PLAYER.

Your DVR will download the Mini Player with the backup files. You can play the backup files with the Mini Player on your PC and convert the files to .JPG or .AVI format.

Appendix B – How to use the virtual keyboard



Figure 69 — VIRTUAL KEYBOARD

You will be using the virtual keyboard when setting up the DVR. Highlight the button and press the button to enter.

The SHIFT button switch the capital letters and the small letters. Exactly, upper two figures of virtual keyboard will be toggled when you highlight the SHIFT and press the button.

the BACK button has a cursor be moved left and one last character be deleted.

The CLEAR button clean all input characters in the text box.

If you want to use input words and exit, highlight the OK and press the button.

If you don't want to use input words and exit, highlight the CANCEL and press the button.

Appendix C – Using Hot Keys

Smart Playback:

Press the DOWN arrow button when playing back video. In the Smart Playback mode, your DVR will play back the recorded video that has motions.

Panorama Playback:

Press the UP arrow button in a single channel playback.

NOTE: The Panorama playback is working in single channel screens only. You can change the screen to 2x2, 3x3, 4x4 formats by pressing the Up arrow button in the Panorama mode.

Cut & Save:

BACKUP → BACKUP → BACKUP. You can set up the start time by pressing the Spot button first time and set up the end time by pressing the Spot button again. Press the Backup button after setting up the start and end time.

Appendix D - Troubleshooting

Problem	Possible Solution
No Power	<ul style="list-style-type: none">• Check power cord connections.• Confirm that there is power at the outlet.
No Live Video	<ul style="list-style-type: none">• Check camera video cable and connections.• Check monitor video cable and connections.• Confirm that the camera has power.• Check camera lens settings.
Live Video Very Bright	If a cable is attached to the "Loop" connector, make certain it is connected to a properly terminated device.
Mouse is not working	Press the FREEZE to reset the mouse.
DVR has stopped recording	If hard disk is full, you will either need to delete video or set the DVR to the Overwrite Mode.

Appendix E – Specifications

ET		400	800
Video	Inputs	• 4 CH Composite videos	• 8 CH Composite videos
	Outputs	• CCTV Monitor(NTSC/PAL), • 1 Spot CCTV Monitor(NTSC/PAL)	• CRT(VGA) Monitor (Option)
Monitoring	Display	• NTSC : 120fps • PAL : 100fps	• NTSC : 240fps • PAL : 200fps
	Screen split	• 1/4 Split	• 1/4/8 Split
Recording	Performance	• NTSC CIF(120fps),HVGA(60fps), VGA(30fps) • PAL CIF(100fps),HVGA(50fps), VGA(25fps)	• NTSC CIF(120fps), HVGA(60fps), VGA(30fps) • PAL CIF(100fps), HVGA(50fps), VGA(25fps)
	Resolution	• NTSC : CIF(336x224), HVGA(672x224), VGA(672x448) • PAL : CIF(336x272), HVGA(672x272), VGA(672x544)	
	Compression	• Algorithm tuned for DVR applications from JPEG, H.263 and MPEG standard	
	Mode	• Motion detection, Sensor, Schedule • Variable compression rate, recording frame, motion sensitivity	
	Storage media	• Internal Max. 4 x HDD (Option)	• Removal CD R/W or HDD (Option)
Audio	• 1 Channel, G.726 Compression		
Playback	Mode	• Multi-channel playback(Max 4, 8 ch), Simultaneous playback, Panorama playback	
	Searching	• By Channel, Time, Date, Motion detection, Sensor events	
Remote Monitoring S/W		• Server Management Software (SMS)	
Alarm/Sensor		• 1/4	• 1/8
Camera Control		• Pan/Tilt, Zoom, Focus, Iris	
Back-up		• Through External USB2.0 Ports(Memory Stick, HDD, CD R/W) • Removal HDD, CD-RW/DVD RW • Remote S/W	
Hardware Spec.	Size / Weight	• 350(W) x 400(D) x 88(H) : 2U Rack Mount Kit / • 6 kg	
	Power	• Max. 50W, 90~264(47Hz~63Hz)	
	UPS	• External UPS (Option)	

Appendix F – DVR FAQ

General

Q. What does Embedded Linux mean?

A. Embedded Linux means that the operating system of the DVR has been implanted onto the CPU (Central Processing Unit). This means that the system response time is faster, is more stable, and that the core of the DVR is never affected by external factors, such as virus, hacking, and system failure due to hard drive abnormalities.

Q. Is the DVR up-gradable by CD or network ?

A. Both are possible by CD-RW and client program.

Q. How can I reset DVR to the factory default setting?

A. Load the factory default setting from CONFIG menu.

Live Monitoring

Q. Is it possible Live screen monitoring with specific cameras?

A. You can set the camera sequence through CAMEO swap.

Recording

Q. How do you record?

A. Using the Time Record와 Event Record from RECORD menu, or Default Record button allows to record.

Q. What is Time Recording?

A. It is recording that is not related to event recording.

Q. What does that Event mean?

A. That means Motion, Alarm In, Video-loss event activity.

Q. What is Event Recording?

A. It only records when the event occurs and that triggers the recording.

Searching & Playing Video

Q. How to playback the video?

A. Search time and event to playback from Search menu.

Q. Is it possible to view Live screen during the playback?

A. It is possible to see using Live Cam Change from CAMEO Menu during the playback.

Q. Is it possible to copy the wanted section of video during the playback?

A. Yes, select starting and ending time with Spot key, then using the Backup key to save.

Backup

Q. Is it possible to backup to DVD media?

A. DVD-RW device is installed then it is possible.

Q. Can USB memory stick be used?

A. Yes.

Network

- Q. Does it support dynamic IP?
- A. Set the Dynamic IP from Ethernet Setup allows to use it.
- Q. Mail is not sent out.
- A. All the setting in Ethernet Setup value should be set correctly.

Miscellaneous

- Q. Is it possible to use either mouse, joystick or keyboard through the USB port?
- A. Mouse input device and memory stick is supported as the primary device.
- Q. What type of cameras should be used?
- A. NTSC or PAL system cameras are OK to use.

Menu Style change


If you want to set or change the detail and advanced menu, you have to change menu style to PLUS from BASIC. Default menu style is BASIC.

First, press the MENU button on front keypad.

Then, select system menu in main menu. There is MENU STYLE and you can change it.



Highlight the value beside MENU STYLE and press the  button.

When you change the MENU STYLE to PLUS, DVR will ask you to input ADMIN password with below confirm menu.

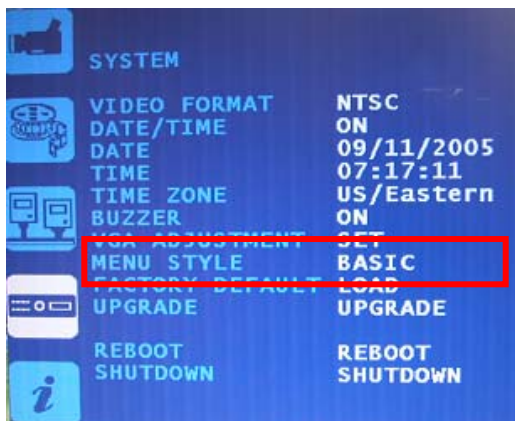

NOTE: You can set up DVR in detail using PLUS MENU. But Using PLUS MENU is more difficult because there is much menu and you have to know detail information about DVR.

To change again to BASIC menu style from PLUS menu style, move the SYSTEM menu.

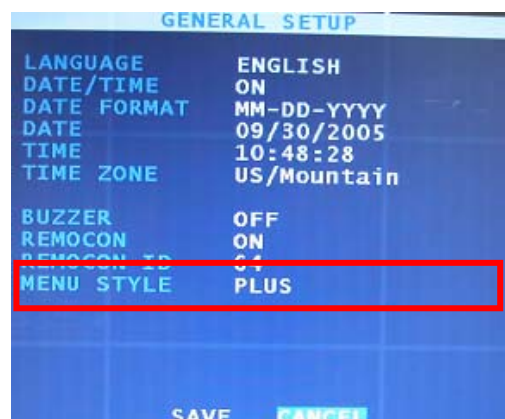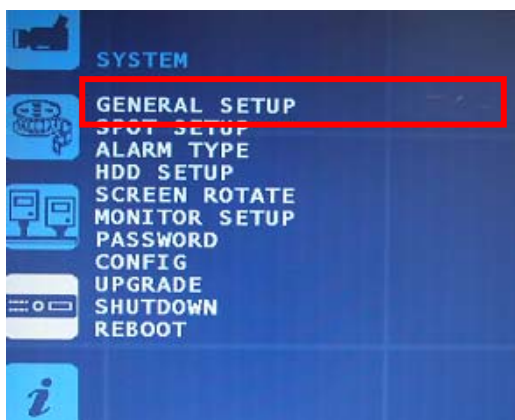

Then, change MENU STYLE to BASIC.